

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
124.013	209-070-262-003	TEMP/PRESS IND	Kratos	√	√
124.014	212-070-116-005	TEMP/PRESS IND	Kratos	√	√
124.039	209-070-264-003	DUAL AMP IND	Kratos	√	√
124.041		Dual Temperature and Pressure IND.	Kratos	√	√
124.043		Dual Temperature and Pressure IND.	Kratos	√	√
124.045		Dual Temperature and Pressure IND.	Kratos	√	√
124.115		TEMP/PRESS IND	Kratos	√	√
124.552		TEMP/PRESS IND	Kratos	√	√
251		Passenger Speaker Amplifier	DB Systems	√	√
449		Power Supply	Pacific Electro	√	√
1436		Regulator	THALES	√	√
1436		Regulator	THALES	√	√
3459		CONTROL UNIT	L'HOTELLIER	√	√
3459		CONTROL UNIT	L'HOTELLIER	√	√
3461		CIRCUIT CONTROL	L'HOTELLIER	√	√
5728		TURN AND SLIP INDICATOR	AIR PRECISION	√	√
5728		TURN AND SLIP INDICATOR	AIR PRECISION	√	√
9696		Blower Motor	SERMART	√	√
20031		AC Generator	THALES	√	√
20031		AC Generator	THALES	√	√
41830		NR INDICATOR	LIEBHERR	√	√
42370		NR INDICATOR	LIEBHERR	√	√
42960		NR INDICATOR	LIEBHERR	√	√
42960		NR INDICATOR	LIEBHERR	√	√
50010		WARNING ANNUNCIATOR PANEL	SN-IRGE	√	√
50579		Hydraulic Pressure Transmitter	Kratos	√	√
53500		WARNING ANNUNCIATOR PANEL	SN-IRGE	√	√
176185		Actuator	AUTOFLUG	√	√
176185		Actuator	AUTOFLUG	√	√
176188		Actuator	AUTOFLUG	√	√
176188		Actuator	AUTOFLUG	√	√
228487		TRANSFER PUMP	IN-SERVICES	√	√
228487		TRANSFER PUMP	IN-SERVICES	√	√
521352	MGC-EA4A	GENERATOR CONTROL UNIT ASSEMBLY	EATON	√	√
521875	50-389102-25	ITT INDICATOR	Weston	√	√
521939	90-384026-1	ITT INDICATOR	Weston	√	√
521940	90-384026-5	ITT INDICATOR	Weston	√	√
521941	90-384026-9	ITT INDICATOR	Weston	√	√
521942	90-384026-11	ITT INDICATOR	Weston	√	√
521944	90-384026-3	ITT INDICATOR	Weston	√	√
521945	90-384026-7	ITT INDICATOR	Weston	√	√
521992	1822-191	TOT INDICATOR	Weston	√	√
748967		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
748967		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
749753		INDICATOR FUEL	IN-SERVICES	√	√
749841		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749841		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749851		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749851		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749853		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749853		REFUEL CONTROL PANEL	IN-SERVICES	√	√
4057376		RETRACTABLE LANDING LIGHT	IN-SERVICES	√	√
4168732		SEARCHLIGHT	IN-SERVICES	√	√
4168732		RETRACTABLE LIGHT	IN-SERVICES	√	√
4168748		SEARCHLIGHT	IN-SERVICES	√	√
4168748		RETRACTABLE LIGHT	IN-SERVICES	√	√
4168762		SEARCHLIGHT	IN-SERVICES	√	√
4168762		SEARCHLIGHTS	IN-SERVICES	√	√
4202104		SEARCHLIGHT	IN-SERVICES	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
4202104		SEARCHLIGHTS	IN-SERVICES	√	√
4217212		SEARCHLIGHT	IN-SERVICES	√	√
4217212		RETRACTABLE LIGHT	IN-SERVICES	√	√
4217228		SEARCHLIGHT	IN-SERVICES	√	√
4217228		SEARCHLIGHTS	IN-SERVICES	√	√
4219867		SEARCHLIGHT	IN-SERVICES	√	√
4219867		RETRACTABLE LIGHT	IN-SERVICES	√	√
4226271		SEARCHLIGHT	IN-SERVICES	√	√
4226271		SEARCHLIGHTS	IN-SERVICES	√	√
4257624		SEARCHLIGHT	IN-SERVICES	√	√
4257624		RETRACTABLE LIGHT	IN-SERVICES	√	√
4274479		SEARCHLIGHT	IN-SERVICES	√	√
4301504		Search Light	IN-SERVICES	√	√
4307405		SEARCHLIGHT	IN-SERVICES	√	√
4307405		SEARCHLIGHTS	IN-SERVICES	√	√
4360404		SEARCHLIGHT	IN-SERVICES	√	√
4360404		SEARCHLIGHTS	IN-SERVICES	√	√
4361646		SEARCHLIGHT	IN-SERVICES	√	√
4361646		SEARCHLIGHTS	IN-SERVICES	√	√
39951213		N/ROTOR INDICATOR	THALES	√	√
064-1019-xx	KY 196	VHF Communications Transceiver	Bendix/King	√	√
064-1023-00	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-01	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-02	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-03	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-04	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-05	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-06	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-07	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-08	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-09	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-10	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-11	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-12	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-13	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-14	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1023-15	KTR 908	KTR 908 VHF Transceiver	Bendix/King	√	√
064-1054-30	KY 196A	VHF Communications Transceiver	Bendix/King	√	√
064-1054-31	KY 196A	VHF Communications Transceiver	Bendix/King	√	√
064-1054-32	KY 196A	VHF Communications Transceiver	Bendix/King	√	√
064-1054-50	KY 196A	VHF Communications Transceiver	Bendix/King	√	√
064-1054-60	KY 196A	VHF Communications Transceiver	Bendix/King	√	√
066-1048-00	KRA-405	Radio Altitude R/T	Bendix/King	√	√
066-1048-02	KRA-405	Radio Altitude R/T	Bendix/King	√	√
066-1061-00	KRA-10	Radar Altimeter R/T	Bendix/King	√	√
066-1061-01	KRA-10	Radar Altimeter R/T	Bendix/King	√	√
066-1061-03	KRA-10A	Radar Altimeter R/T	Bendix/King	√	√
066-1062-00	KT 76A	KT 76A Transponder	Bendix/King	√	√
066-1062-01	KT 78A	KT 78A Transponder	Bendix/King	√	√
066-1062-02	KT 76A	KT 76A Transponder	Bendix/King	√	√
066-1062-10	KT 76A	KT 76A Transponder	Bendix/King	√	√
066-3031-00	KNI 415	Radio Altitude Indicator	Bendix/King	√	√
066-3031-01	KNI 415	Radio Altitude Indicator	Bendix/King	√	√
066-3031-02	KNI 415	Radio Altitude Indicator	Bendix/King	√	√
066-3031-03	KNI 415	Radio Altitude Indicator	Bendix/King	√	√
066-3031-04	KNI 415	Radio Altitude Indicator	Bendix/King	√	√
066-3034-04	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-05	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-06	KI 207	NAV INDICATOR	Bendix/King	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
066-3034-07	KI 202	NAV INDICATOR	Bendix/King	√	√
066-3034-08	KI 202	NAV INDICATOR	Bendix/King	√	√
066-3034-09	KI 202	NAV INDICATOR	Bendix/King	√	√
066-3034-10	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-11	KI 202	NAV INDICATOR	Bendix/King	√	√
066-3034-12	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-13	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-14	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-15	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-16	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-17	KI 207	NAV INDICATOR	Bendix/King	√	√
066-3034-24	KI 206	NAV INDICATOR	Bendix/King	√	√
066-3034-25	KI 207	NAV INDICATOR	Bendix/King	√	√
066-3044-00	KNI 416	Radio Altitude Indicator	Bendix/King	√	√
066-3044-01	KNI 416	Radio Altitude Indicator	Bendix/King	√	√
066-3044-02	KNI 416	Radio Altitude Indicator	Bendix/King	√	√
066-3044-03	KNI 416	Radio Altitude Indicator	Bendix/King	√	√
066-3044-04	KNI 416	Radio Altitude Indicator	Bendix/King	√	√
066-3084-00	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-01	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-02	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-03	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-30	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-31	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-32	IN-182A	Radar Indicator	Bendix/King	√	√
066-3084-33	IN-182A	Radar Indicator	Bendix/King	√	√
066-3114-00	IN-812A	Radar Indicator	Bendix/King	√	√
066-3114-01	IN-812A	Radar Indicator	Bendix/King	√	√
069-1024-00	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-01	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-02	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-03	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-04	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-05	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-06	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-07	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-08	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-09	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-10	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-11	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-12	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-13	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-30	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-31	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-32	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-33	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-34	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-35	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-36	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-37	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-38	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-39	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-40	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-41	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-42	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1024-43	KX 155	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-00	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-01	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-02	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
069-1025-03	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-04	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-05	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-06	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-07	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-20	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-21	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-22	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-23	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-24	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-25	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-26	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
069-1025-27	KX 165	VHF NAV COMM Transceiver	Bendix/King	√	√
071-1076-00	KDA 697	RMI Adapter	Bendix/King	√	√
071-1215-24	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-25	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-26	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-27	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-29	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-30	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-31	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-32	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-34	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-35	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-36	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-37	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-38	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-39	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-40	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-41	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-42	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-43	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-44	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-45	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-54	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-55	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-56	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-57	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-59	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-60	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-61	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-62	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-63	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-64	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-65	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-66	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-67	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-70	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1215-71	KFS 598	COMM Control Unit	Bendix/King	√	√
071-1315-00	RS-181A	Radar Sensor	Bendix/King	√	√
071-1315-10	RS-181A	Radar Sensor	Bendix/King	√	√
071-1315-30	RS-181A	Radar Sensor	Bendix/King	√	√
071-1378-00	RS-811A	Radar Sensor	Bendix/King	√	√
10035-11326	212-070-238-003	ALTIMETER	AEROSONIC	√	√
10035-11424	212-070-238-007	ALTIMETER	AEROSONIC	√	√
10-1733-1		FLUORESCENT WINDOW LIGHT	Grimes	√	√
10-1733-2		FLUORESCENT WINDOW LIGHT	Grimes	√	√
10-1733-3		FLUORESCENT WINDOW LIGHT	Grimes	√	√
10-1733-4		FLUORESCENT WINDOW LIGHT	Grimes	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
10355N01T00	212-075-067-113	ITT INDICATOR	Ametek	√	√
10355N02T00	212-075-067-115	ITT INDICATOR	Ametek	√	√
10355N03T00	212-075-067-117	ITT INDICATOR	Ametek	√	√
10355N04T00	212-075-067-119	ITT INDICATOR	Ametek	√	√
10355N05T00	212-075-067-117	ITT INDICATOR	Ametek	√	√
10355N07T00	212-075-067-123	ITT INDICATOR	Ametek	√	√
10446N02W00	206-075-739-113	TORQUE INDICATOR	AMETEK	√	√
10447N01T00	206-375-007-103	TOT Indicator	AMETEK	√	√
105-90948	DL412-39	TACHOMETER	VDO	√	√
105-90948		TACHOMETER	Insco	√	√
105-956851		TACHOMETER	Insco	√	√
105-957051	DL412-53	TACHOMETER	VDO	√	√
109-0729-08-3		TACHOMETER	Insco	√	√
109-0729-9-1	124.419	PRESS INDICATOR	KRATOS	√	√
109-0729-9-1	124.419-1	PRESS INDICATOR	KRATOS	√	√
10ZZ210M		FRONT PANEL	IN-SERVICES	√	√
11-0238-3		Emergency Exit Light Assembly	Grimes	√	√
11-0238-5		Emergency Exit Light Assembly	Grimes	√	√
11-0238-6		Emergency Exit Light Assembly	Grimes	√	√
11-0238-7		Emergency Exit Light Assembly	Grimes	√	√
111302-5		Horizontal Situation Indicator	Astronautics	√	√
111303-4		Attitude Director Indicator	Astronautics	√	√
111RC01Y01		ANTI-COLLISION FLASHER UNIT	IN-SERVICES	√	√
1-1223-03		CONTENTS INDICATOR	THALES	√	√
114-1015-001		POWER SUPPLY UNIT	THALES	√	√
114-1015-001		POWER SUPPLY UNIT	THALES	√	√
11-6537-1		CIRCUIT CARD ASSEMBLY	Grimes	√	√
11-6537-3		CIRCUIT CARD ASSEMBLY	Grimes	√	√
11-6537-5		CIRCUIT CARD ASSEMBLY	Grimes	√	√
11-6537-7		CIRCUIT CARD ASSEMBLY	Grimes	√	√
11-6537-9		CIRCUIT CARD ASSEMBLY	Grimes	√	√
117-94032-01		TACHOMETER	Insco	√	√
117-94056-01		TACHOMETER	Insco	√	√
120B25-3		Differential Pressure switch	IN-SERVICES	√	√
120B25-3		Differential Pressure switch	IN-SERVICES	√	√
122GA01AAY04		AC GROUND POWER PROTECTION UNIT	IN-SERVICES	√	√
122GA01AAY04		AC GROUND POWER PROTECTION UNIT	THALES	√	√
122GA01Y03		AC GROUND POWER PROTECTION UNIT	IN-SERVICES	√	√
122GA01Y03		AC GROUND POWER PROTECTION UNIT	THALES	√	√
122GA01Y04		AC GROUND POWER PROTECTION UNIT	IN-SERVICES	√	√
122GA01Y04		AC GROUND POWER PROTECTION UNIT	THALES	√	√
122Y025	209-072-262-109	TORQUE INDICATOR	Kratos	√	√
124.014-111	212-070-116-011	TEMP/PRESS IND	Kratos	√	√
124.014-121	212-070-116-001	TEMP/PRESS IND	Kratos	√	√
124.014-13	212-070-116-013	TEMP/PRESS IND	Kratos	√	√
124.014-15	212-070-116-015	TEMP/PRESS IND	Kratos	√	√
124.014-17	212-070-116-017	TEMP/PRESS IND	Kratos	√	√
124.014-19	212-070-116-019	TEMP/PRESS IND	Kratos	√	√
124.014-23	212-070-116-023	TEMP/PRESS IND	Kratos	√	√
124.014-25	212-070-116-025	TEMP/PRESS IND	Kratos	√	√
124.039-3		Dual Ampere Indicator	Kratos	√	√
124.040	209-070-263-003	DUAL VOLTAGE IND	KRATOS	√	√
124.040-1		Dual AC DC Voltage Indicator	Kratos	√	√
124.041	212-070-116-007	TEMP/PRESS IND	KRATOS	√	√
124.041-1		Dual Temperature and Pressure IND.	Kratos	√	√
124.041-3		Dual Temperature and Pressure IND.	Kratos	√	√
124.043		TEMP/PRESS IND	KRATOS	√	√
124.044		FUEL PRESS IND	KRATOS	√	√
124.044-2		FUEL PRESS IND	KRATOS	√	√
124.044-3	214-075-253-001	FUEL PRESS IND	KRATOS	√	√
124.045	212-070-116-009	TEMP/PRESS IND	KRATOS	√	√
124.067	212-075-420-001	ITT INDICATOR	KRATOS	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
124.067-2	212-075-420-003	ITT INDICATOR	KRATOS	√	√
124.069	209-070-275-001	FUEL PRESS IND	KRATOS	√	√
124.1006		TEMP/PRESS IND	KRATOS	√	√
124.1007		TEMP/PRESS IND	KRATOS	√	√
124.1012-1	206-075-678-101	TEMP/PRESS IND	KRATOS	√	√
124.1012-3	206-075-678-103	TEMP/PRESS IND	KRATOS	√	√
124.1012-5	206-075-678-107	TEMP/PRESS IND	KRATOS	√	√
124.1012-7	206-075-678-105	TEMP/PRESS IND	KRATOS	√	√
124.1013	206-075-677-101	TEMP/PRESS IND	KRATOS	√	√
124.1013-1	206-075-677-103	TEMP/PRESS IND	KRATOS	√	√
124.1013-2	206-075-677-105	TEMP/PRESS IND	KRATOS	√	√
124.1014	206-075-676-103	FUEL/LOAD IND	KRATOS	√	√
124.1014-1	206-075-676-105	FUEL/LOAD IND	KRATOS	√	√
124.1014-2	206-075-676-107	FUEL/LOAD IND	KRATOS	√	√
124.1014-3	206-075-676-109	FUEL/LOAD IND	KRATOS	√	√
124.1014-4	206-075-676-111	FUEL/LOAD IND	KRATOS	√	√
124.1128-1	222-375-025-107	DUAL DC AMMETER	KRATOS	√	√
124.1128-2		DUAL DC AMMETER	KRATOS	√	√
124.115	209-070-262-009	TEMP/PRESS IND	KRATOS	√	√
124.115-1		TEMP/PRESS IND	Kratos	√	√
124.115-1	209-070-262-009	TEMP/PRESS IND	KRATOS	√	√
124.115-3		TEMP/PRESS IND	Kratos	√	√
124.115-3	209-070-262-101	TEMP/PRESS IND	KRATOS	√	√
124.115-5		TEMP/PRESS IND	Kratos	√	√
124.115-5	209-070-262-103	TEMP/PRESS IND	KRATOS	√	√
124.324	214-075-219-3	EGT Indicator	Kratos	√	√
124.324-5	214-075-219-5	EGT Indicator	Kratos	√	√
124.419	109-0729-9-1	PRESS INDICATOR	KRATOS	√	√
124.419-1	109-0729-9-1	PRESS INDICATOR	KRATOS	√	√
124.439	206-075-706-001	XMSN OIL PRESS IND	KRATOS	√	√
124.440	206-075-707-001	FUEL QTY IND	KRATOS	√	√
124.442-1	206-075-708-005	TOT INDICATOR	KRATOS	√	√
124.442-2	206-075-708-005	TOT INDICATOR	KRATOS	√	√
124.442-3	206-075-708-003	TOT INDICATOR	KRATOS	√	√
124.443	206-075-710-001	AMMETER	KRATOS	√	√
124.444-0		TOT INDICATOR	Kratos	√	√
124.444-0		TOT INDICATOR	KRATOS	√	√
124.444-10		TOT INDICATOR	Kratos	√	√
124.444-10		TOT INDICATOR	KRATOS	√	√
124.444-12		TOT INDICATOR	Kratos	√	√
124.444-12		TOT INDICATOR	KRATOS	√	√
124.444-14		TOT INDICATOR	Kratos	√	√
124.444-14		TOT INDICATOR	KRATOS	√	√
124.444-16		TOT INDICATOR	Kratos	√	√
124.444-16		TOT INDICATOR	KRATOS	√	√
124.444-18		TOT INDICATOR	Kratos	√	√
124.444-18		TOT INDICATOR	KRATOS	√	√
124.444-2		TOT INDICATOR	Kratos	√	√
124.444-2		TOT INDICATOR	KRATOS	√	√
124.444-20		TOT INDICATOR	Kratos	√	√
124.444-20		TOT INDICATOR	KRATOS	√	√
124.444-4		TOT INDICATOR	Kratos	√	√
124.444-4		TOT INDICATOR	KRATOS	√	√
124.444-6		TOT INDICATOR	Kratos	√	√
124.444-6		TOT INDICATOR	KRATOS	√	√
124.444-8		TOT INDICATOR	Kratos	√	√
124.444-8		TOT INDICATOR	KRATOS	√	√
124.480-1	212-075-562-001	ITT INDICATOR	KRATOS	√	√
124.480-3	212-075-562-003	ITT INDICATOR	KRATOS	√	√
124.546		HYD PRESS/TEMP IND	Kratos	√	√
124.550		OIL PRESS/TEMP IND	Kratos	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
124.550-1	222-375-018-103	TEMP/PRESS IND	Kratos	√	√
124.552-1		TEMP/PRESS IND	Kratos	√	√
124.552-2		TEMP/PRESS IND	Kratos	√	√
124.933A	209-070-264-001	INDICATOR, DUAL AMP	Kratos	√	√
124.934A	209-070-263-001	DUAL VOLTAGE IND	Kratos	√	√
1372-1-101		RPM limit Detector	Avtech	√	√
1372-1-5		RPM limit Detector	Avtech	√	√
1384-95R-5721		DC/DC CONVERTER	SOCA SUD	√	√
1384-95R-5721		DC/DC CONVERTER	SOCA SUD	√	√
138740-15		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-15		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-17		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-17		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-19		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-19		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-23		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-23		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-25		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-25		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-9		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
138740-9		HORIZONTAL SITUATION INDICATOR	ASTRONAUTICS	√	√
1396-1-5		RPM Sensor	Avtech	√	√
13ZZ210M		FRONT PANEL	IN-SERVICES	√	√
1429-XX		VOLTAGE REGULATOR	THALES	√	√
1429-XX		VOLTAGE REGULATOR	THALES	√	√
142GA01Y04		ALTERNATOR PROTECTION CARD	IN-SERVICES	√	√
142GA01Y04		ALTERNATOR PROTECTION CARD	THALES	√	√
142GA01Y05		ALTERNATOR PROTECTION CARD	IN-SERVICES	√	√
142GA01Y05		ALTERNATOR PROTECTION CARD	THALES	√	√
15020-6501		ALTIMETER	AEROSONIC	√	√
150SG117Q		Starter Generator	APC	√	√
150SG122Q		Starter Generator	APC	√	√
152B2		TEMP INDICATOR	LEWIS	√	√
152B2	MJ2	TEMP INDICATOR	LEWIS	√	√
152B204		TEMP INDICATOR	LEWIS	√	√
152B206	C6SC1028-7	TEMP INDICATOR	LEWIS	√	√
152B208B	50-389102-1	TEMP INDICATOR	LEWIS	√	√
152B208D	50-389102-7	TEMP INDICATOR	LEWIS	√	√
152B208E	50-389102-9	TEMP INDICATOR	LEWIS	√	√
152B208F	50-389102-11	TEMP INDICATOR	LEWIS	√	√
152B210	969085-1	TEMP INDICATOR	LEWIS	√	√
152B22	MJ2	TEMP INDICATOR	LEWIS	√	√
152B22		TEMP INDICATOR	LEWIS	√	√
152B228	206-375-012-101	TEMP INDICATOR	LEWIS	√	√
152B2A		TEMP INDICATOR	LEWIS	√	√
152B2A	MJ2	TEMP INDICATOR	LEWIS	√	√
152B3	MJ6	TEMP INDICATOR	LEWIS	√	√
152B4		TEMP INDICATOR	LEWIS	√	√
152B4	MJ1	TEMP INDICATOR	LEWIS	√	√
152B44		TEMP INDICATOR	LEWIS	√	√
152B44	MJ1	TEMP INDICATOR	LEWIS	√	√
152B44B		TEMP INDICATOR	LEWIS	√	√
152B45		TEMP INDICATOR	LEWIS	√	√
152B5	MJ3	TEMP INDICATOR	LEWIS	√	√
152B8		TEMP INDICATOR	LEWIS	√	√
152BL2D	212-070-240-001	TEMP INDICATOR	LEWIS	√	√
152BL702		TEMP INDICATOR	LEWIS	√	√
152BL702A		TEMP INDICATOR	LEWIS	√	√
152BL702C		TEMP INDICATOR	LEWIS	√	√
152BL702D		TEMP INDICATOR	LEWIS	√	√
152BL702E		TEMP INDICATOR	LEWIS	√	√
152BL703		TEMP INDICATOR	LEWIS	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
152BL704		TEMP INDICATOR	LEWIS	√	√
152BL706		TEMP INDICATOR	LEWIS	√	√
152BL708		TEMP INDICATOR	LEWIS	√	√
152BL708A		TEMP INDICATOR	LEWIS	√	√
152BL708B		TEMP INDICATOR	LEWIS	√	√
152BL708H		TEMP INDICATOR	LEWIS	√	√
152BL709		TEMP INDICATOR	LEWIS	√	√
152BL709A		TEMP INDICATOR	LEWIS	√	√
152BL722		TEMP INDICATOR	LEWIS	√	√
152BL801		TEMP INDICATOR	LEWIS	√	√
152BL801A		TEMP INDICATOR	LEWIS	√	√
152BL801B		TEMP INDICATOR	LEWIS	√	√
152BL801C		TEMP INDICATOR	LEWIS	√	√
152BL801D		TEMP INDICATOR	LEWIS	√	√
152BL801E		TEMP INDICATOR	LEWIS	√	√
152BL802		TEMP INDICATOR	LEWIS	√	√
152BL802A		TEMP INDICATOR	LEWIS	√	√
152BL802B		TEMP INDICATOR	LEWIS	√	√
152BL802C		TEMP INDICATOR	LEWIS	√	√
152BL803		TEMP INDICATOR	LEWIS	√	√
152BL803A		TEMP INDICATOR	LEWIS	√	√
152BL803B		TEMP INDICATOR	LEWIS	√	√
152BL803C		TEMP INDICATOR	LEWIS	√	√
152C208E	90-384026-17	ITT INDICATOR	LEWIS	√	√
152C208F	90-384026-21	ITT INDICATOR	LEWIS	√	√
152C208L	90-384026-15	ITT INDICATOR	LEWIS	√	√
152C208M	90-384026-23	ITT INDICATOR	LEWIS	√	√
152C208N	90-384026-19	ITT INDICATOR	LEWIS	√	√
152C208R	90-384026-13	ITT INDICATOR	LEWIS	√	√
152C208T	90-384026-27	ITT INDICATOR	LEWIS	√	√
152C208U	90-384026-31	TEMP INDICATOR	LEWIS	√	√
152C304	369A4521-7	TEMP INDICATOR	LEWIS	√	√
152C42	50565	TEMP INDICATOR	LEWIS	√	√
152C42A	49594-2	TEMP INDICATOR	LEWIS	√	√
152C42G	29468-2	TEMP INDICATOR	LEWIS	√	√
152HL2	206-070-267-003	TEMP INDICATOR	LEWIS	√	√
152HL2W	206-070-267-007	TEMP INDICATOR	LEWIS	√	√
152HL3W		TEMP INDICATOR	LEWIS	√	√
15-30-2		ADJUSTABLE REGULATED POWER SUPPLY	SELA	√	√
155BW1160003		Fan	ETRI	√	√
155BW1160003		Fan	ETRI	√	√
1564-1-1		Tubine Overspeed Detector	Avtech	√	√
18-1838-15	212-070-160-015	DUAL TORQUE IND	COURTER	√	√
18-1838-17	212-070-160-017	DUAL TORQUE IND	COURTER	√	√
18-1838-22	212-070-160-107	DUAL TORQUE IND	COURTER	√	√
1913HT		PRESSURE INDICATOR	THALES	√	√
1913HT		PRESSURE INDICATOR		√	√
1ZL122M01		FRONT PANEL	IN-SERVICES	√	√
1ZZ210M		MASTER ALARM AND INDICATOR PANEL	IN-SERVICES	√	√
1ZZ210M		FRONT PANEL	IN-SERVICES	√	√
203-022-008	76450-01078-112	OIL TEMP/PRESS IND.	GULL	√	√
203-022-008	76450-01078-112	OIL TEMP/PRESS IND.	GULL AIRBORNE	√	√
203-023-003	76450-01078-104	HYDRAULIC PRESSURE IND.	GULL	√	√
204-072-129-001		DUAL TACHOMETER	Insco	√	√
204-072-129-003		DUAL TACHOMETER	Insco	√	√
206-070-241-001		DUAL TACHOMETER	Insco	√	√
206-070-243-001		TACHOMETER	Insco	√	√
206-070-243-003		TACHOMETER	Insco	√	√
206-070-265-001		DUAL TACHOMETER	Insco	√	√
206-070-265-003		DUAL TACHOMETER	Insco	√	√
206-070-265-005		DUAL TACHOMETER	Insco	√	√
206-070-265-007		DUAL TACHOMETER	Insco	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
206-070-265-009		DUAL TACHOMETER	Insco	√	√
206-070-265-011		DUAL TACHOMETER	Insco	√	√
206-070-265-101		DUAL TACHOMETER	Insco	√	√
206-070-266-001		TACHOMETER	Insco	√	√
206-070-266-003		TACHOMETER	Insco	√	√
206-070-266-005		TACHOMETER	Insco	√	√
206-070-266-007		TACHOMETER	Insco	√	√
206-070-266-009		TACHOMETER	Insco	√	√
206-070-266-011		TACHOMETER	Insco	√	√
206-070-266-013		TACHOMETER	Insco	√	√
206-070-268-005		Torquemeter	Insco	√	√
206-070-268-011		Torquemeter	Insco	√	√
206-070-268-013		Torquemeter	Insco	√	√
206-070-274-005		TURN & BANK IND	General Design	√	√
206-070-989-001		Torquemeter	Insco	√	√
206-075-185-001		Torquemeter	Insco	√	√
206-075-185-003		Torquemeter	Insco	√	√
206-075-185-101		Torquemeter	Insco	√	√
206-075-185-105		Torquemeter	Insco	√	√
206-075-186-003		Dual Loadmeter/Fuel Pressure Indicator	Insco	√	√
206-075-186-005		Dual Loadmeter/Fuel Pressure Indicator	Insco	√	√
206-075-187-001		TEMP/PRESS IND	Insco	√	√
206-075-187-003		TEMP/PRESS IND	Insco	√	√
206-075-188-001		TEMP/PRESS IND	Insco	√	√
206-075-188-003		TEMP/PRESS IND	Insco	√	√
206-075-188-005		TEMP/PRESS IND	Insco	√	√
206-075-189-1		Fuel Quantity Indicator	Insco	√	√
206-075-190-001	5021-3001	Turbine Outlet Temp. Ind.	Insco	√	√
206-075-190-003	5021-3002	Turbine Outlet Temp. Ind.	Insco	√	√
206-075-190-007	5021-3030	Turbine Outlet Temp. Ind.	Insco	√	√
206-075-545-5		RPM Sensor	Avtech	√	√
206-075-607-101		Artificial Horizon	General Design	√	√
206-075-676-103	124.1014	FUEL/LOAD IND	KRATOS	√	√
206-075-676-105	124.1014-1	FUEL/LOAD IND	KRATOS	√	√
206-075-676-107	124.1014-2	FUEL/LOAD IND	KRATOS	√	√
206-075-676-109	124.1014-3	FUEL/LOAD IND	KRATOS	√	√
206-075-676-111	124.1014-4	FUEL/LOAD IND	KRATOS	√	√
206-075-677-101	124.1013	TEMP/PRESS IND	KRATOS	√	√
206-075-677-103	124.1013-1	TEMP/PRESS IND	KRATOS	√	√
206-075-677-105	124.1013-2	TEMP/PRESS IND	KRATOS	√	√
206-075-678-101	124.1012-1	TEMP/PRESS IND	KRATOS	√	√
206-075-678-103	124.1012-3	TEMP/PRESS IND	KRATOS	√	√
206-075-678-105	124.1012-7	TEMP/PRESS IND	KRATOS	√	√
206-075-678-107	124.1012-5	TEMP/PRESS IND	KRATOS	√	√
206-075-680-101	SEL-O19BW	Turbine Outlet Temperature Indicator	Ametek	√	√
206-075-680-103	SEL-O19BC	Turbine Outlet Temperature Indicator	Ametek	√	√
206-075-680-103	3571251-9127	TOT INDICATOR	BENDIX	√	√
206-075-680-105	SEL-O19BD	Turbine Outlet Temperature Indicator	Ametek	√	√
206-075-680-105	3571251-9129	TOT INDICATOR	BENDIX	√	√
206-075-680-107	SEL-O19BU	Turbine Outlet Temperature Indicator	Ametek	√	√
206-075-681-001	8DJ150WAF1	DUAL TACHOMETER IND.	Ametek	√	√
206-075-681-003	8DJ150WAE1	DUAL TACHOMETER IND.	Ametek	√	√
206-075-681-101	8DJ150WAD1	DUAL TACHOMETER IND.	Ametek	√	√
206-075-681-105	8DJ150WAH1	DUAL TACHOMETER IND.	Ametek	√	√
206-075-682-1	8DJ81WBS\$	Tach Indicator	Ametek	√	√
206-075-682-105	DL412-57	TACHOMETER	VDO	√	√
206-075-682-107	DL412-61	TACHOMETER	VDO	√	√
206-075-682-109	DL412-63	TACHOMETER	VDO	√	√
206-075-706-001	124.439	XMSN OIL PRESS IND	KRATOS	√	√
206-075-707-001	124.440	FUEL QTY IND	KRATOS	√	√
206-075-708-003	124.442-3	TOT INDICATOR	KRATOS	√	√
206-075-708-005	124.442-1	TOT INDICATOR	KRATOS	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
206-075-708-005	124.442-2	TOT INDICATOR	KRATOS	√	√
206-075-710-001	124.443	AMMETER	KRATOS	√	√
206-075-739-111	AW1842BA05	Torque Indicator	Ametek	√	√
206-375-005-101		TOT Indicator	Ametek	√	√
206-375-006-101		TOT Indicator	Ametek	√	√
206-375-007-101		TOT Indicator	Ametek	√	√
206-375-007-103	SEL-019ED	TOT Indicator	Ametek	√	√
206-375-010-101		DUAL TACHOMETER	Insco	√	√
209-070-262-001		TEMP/PRESS IND	KRATOS	√	√
209-070-262-003	124.013	TEMP/PRESS IND	KRATOS	√	√
209-070-262-009		TEMP/PRESS IND	KRATOS	√	√
209-070-262-009	124.115	TEMP/PRESS IND	KRATOS	√	√
209-070-262-009	124.115-1	TEMP/PRESS IND	KRATOS	√	√
209-070-262-101	124.115-3	TEMP/PRESS IND	KRATOS	√	√
209-070-262-103	124.115-5	TEMP/PRESS IND	KRATOS	√	√
209-070-262-109	122Y025	Oil Temp & Press Indicator	KRATOS	√	√
209-070-263-003	000-20382	ENG OIL INDICATOR	Phaotron	√	√
209-070-264-001	124.933A	VOLTAGE INDICATOR, AC/DC		√	√
209-070-264-003	124.039	Dual Ampere Indicator	Kratos	√	√
209-070-275-001	124.069	FUEL PRESS IND	KRATOS	√	√
209-075-325-033		Annunciator Panel	Grimes	√	√
209-075-325-045		Caution Panel for Bell 213	Grimes	√	√
209-075-325-109		Annunciator Panel	Grimes	√	√
209-075-326-1		RPM limit Detector	Northrop	√	√
212-070-116-009	124.045	TEMP/PRESS IND	KRATOS	√	√
212-070-160-001	9813-25-00	DUAL TORQUE IND	Clifton	√	√
212-070-160-005	9813-25-05	DUAL TORQUE IND	Clifton	√	√
212-070-160-007	9813-25-07	DUAL TORQUE IND	Clifton	√	√
212-070-160-015	18-1838-15	DUAL TORQUE IND	COURTER	√	√
212-070-160-017	18-1838-17	DUAL TORQUE IND	COURTER	√	√
212-070-160-101	9813-25-17	DUAL TORQUE IND	Clifton	√	√
212-070-160-107	18-1838-22	DUAL TORQUE IND	COURTER	√	√
212-070-239-001	RC-30-VIL	VSI INDICATOR	AEROSONIC	√	√
212-075-037-105	DL412-55	TACHOMETER	VDO	√	√
212-075-037-107	DL412-60	TACHOMETER	VDO	√	√
212-075-037-109	DL412-64	TACHOMETER	VDO	√	√
212-075-037-111		TACHOMETER	Insco	√	√
212-075-067-105	3571251-9131	TEMP INDICATOR	BENDIX	√	√
212-075-067-109	SEL-0C19EJ	ITT INDICATOR	Ametek	√	√
212-075-420-001	124.067	ITT INDICATOR	KRATOS	√	√
212-075-420-003	124.067-2	ITT INDICATOR	KRATOS	√	√
212-075-562-001	124.480-1	ITT INDICATOR	KRATOS	√	√
212-075-562-003	124.480-3	ITT INDICATOR	KRATOS	√	√
2138-50000-103		DROOP COMPENSATOR AMPLIFIER	NORDEN	√	√
2138-50000-104		DROOP COMPENSATOR AMPLIFIER	NORDEN	√	√
2138-50000-106	76900-01880-106	Droop Compensator Amplifier	Norden Systems	√	√
214-075-221-3	8DJ150WAC1	DUAL TACHOMETER IND.	Ametek	√	√
214-075-242-005	8DJ150LAE1	DUAL TACHOMETER IND.	Ametek	√	√
214-075-244-001		Rate Transmitter	General Design	√	√
214-075-253-001	124.044-3	FUEL PRESS IND	KRATOS	√	√
214-175-248-103		MGT Indicator	Allied	√	√
214-175-248-107		MGT Indicator	Allied	√	√
2180B		TRANSFER PUMP	IN-SERVICES	√	√
2180B		TRANSFER PUMP	IN-SERVICES	√	√
2180B02		TRANSFER PUMP	IN-SERVICES	√	√
2180B02		TRANSFER PUMP	IN-SERVICES	√	√
222-078-003		TACHOMETER	Insco	√	√
222-375-022-101	3571251-9110	TACHOMETER	BENDIX	√	√
222-375-023-101	3571251-9111	MGT IND.	BENDIX	√	√
222-375-023-103	3571251-9119	MGT IND.	BENDIX	√	√
222-375-023-107		MGT Indicator	Allied	√	√
222-375-025-107	124.1128-1	DUAL DC AMMETER	KRATOS	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
23032-006		STARTER GENERATOR	LSI	√	√
23032-006		STARTER GENERATOR	LSI	√	√
23032-007		STARTER GENERATOR	LSI	√	√
23032-007		STARTER GENERATOR	LSI	√	√
23032-010		STARTER GENERATOR	LSI	√	√
23032-010		STARTER GENERATOR	LSI	√	√
23032-011		STARTER GENERATOR	LSI	√	√
23032-011		STARTER GENERATOR	LSI	√	√
23032-018		STARTER GENERATOR	LSI	√	√
23032-018		STARTER GENERATOR	LSI	√	√
23032-019		STARTER GENERATOR	LSI	√	√
23032-019		STARTER GENERATOR	LSI	√	√
23032-022		STARTER GENERATOR	LSI	√	√
23032-022		STARTER GENERATOR	LSI	√	√
23032-025		STARTER GENERATOR	LSI	√	√
23032-025		STARTER GENERATOR	LSI	√	√
23032-026		STARTER GENERATOR	LSI	√	√
23032-026		STARTER GENERATOR	LSI	√	√
23032-027		STARTER GENERATOR	LSI	√	√
23032-027		STARTER GENERATOR	LSI	√	√
23032-028		STARTER GENERATOR	LSI	√	√
23032-028		STARTER GENERATOR	LSI	√	√
23032-20		STARTER GENERATOR	LSI	√	√
23032-20		STARTER GENERATOR	LSI	√	√
2306-556-00-10		FUEL GAUGE INDICATORS	THALES	√	√
2306-557-00-10		FUEL GAUGE INDICATORS	THALES	√	√
2306-559-20-10		FUEL GAUGE INDICATORS	THALES	√	√
2306-559-20-11		FUEL GAUGE INDICATORS	THALES	√	√
2306-560-20-10		FUEL GAUGE INDICATORS	THALES	√	√
2306-560-20-11		FUEL GAUGE INDICATORS	THALES	√	√
2306-561-20-11		FUEL GAUGE INDICATORS	THALES	√	√
2306-562-20-10		FUEL GAUGE INDICATORS	THALES	√	√
2306-562-20-11		FUEL GAUGE INDICATORS	THALES	√	√
2450D		CONTROL UNIT	L'HOTELLIER	√	√
2450D		CONTROL UNIT	L'HOTELLIER	√	√
2503-5		ELECTRICAL MASTER BOX	THALES	√	√
2503-5		ELECTRICAL MASTER BOX	THALES	√	√
2503-6		ELECTRICAL MASTER BOX	THALES	√	√
2503-6		ELECTRICAL MASTER BOX	THALES	√	√
26-62		Control Box	S.E.L.A.	√	√
26-62		CONTROBLO	SELA	√	√
270-2436-xxx	613L-3	NAV Control	Rockwell Collins	√	√
2800-6845N1L		TURN & BANK IND	General Design	√	√
2ZL122M		MASTER ALARM AND INDICATOR PANEL	IN-SERVICES	√	√
2ZL122MY01		MASTER ALARM AND INDICATOR PANEL	IN-SERVICES	√	√
30-0418-3		EMERGENCY EXIT LIGHT	Grimes	√	√
30-0418-5		EMERGENCY EXIT LIGHT	Grimes	√	√
30-0418-7		EMERGENCY EXIT LIGHT	Grimes	√	√
30-0418-9		EMERGENCY EXIT LIGHT	Grimes	√	√
30-0837-1		Strobe Light	Grimes	√	√
30-0837-11		Strobe Light	Grimes	√	√
30-0837-13		Strobe Light	Grimes	√	√
30-0837-15		Strobe Light	Grimes	√	√
30-0837-17		Strobe Light	Grimes	√	√
30-0837-19		Strobe Light	Grimes	√	√
30-0837-21		Strobe Light	Grimes	√	√
30-0837-23		Strobe Light	Grimes	√	√
30-0837-25		Strobe Light	Grimes	√	√
30-0837-27		Strobe Light	Grimes	√	√
30-0837-29		Strobe Light	Grimes	√	√
30-0837-3		Strobe Light	Grimes	√	√
30-0837-31		Strobe Light	Grimes	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
30-0837-33		Strobe Light	Grimes	√	√
30-0837-35		Strobe Light	Grimes	√	√
30-0837-37		Strobe Light	Grimes	√	√
30-0837-39		Strobe Light	Grimes	√	√
30-0837-41		Strobe Light	Grimes	√	√
30-0837-43		Strobe Light	Grimes	√	√
30-0837-45		Strobe Light	Grimes	√	√
30-0837-47		Strobe Light	Grimes	√	√
30-0837-5		Strobe Light	Grimes	√	√
30-0837-7		Strobe Light	Grimes	√	√
30-0837-9		Strobe Light	Grimes	√	√
30-0906-1		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-10		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-101		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-103		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-104		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-105		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-106		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-107		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-109		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-11		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-110		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-111		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-113		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-115		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-116		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-117		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-118		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-119		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-121		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-122		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-123		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-124		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-125		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-126		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-128		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-129		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-13		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-131		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-15		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-16		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-17		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-18		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-19		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-21		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-22		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-23		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-24		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-25		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-26		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-3		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-4		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-5		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-6		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-7		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0906-9		HIGH-INTENSITY STROBE LIGHT	Grimes	√	√
30-0909-1		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0909-101		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0909-103		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0909-107		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0909-201		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0909-203		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
30-0909-207		AIRCRAFT TAIL POSITION FLASHTUBE LIGHT	Grimes	√	√
30-0910-1		Strobe Light	Grimes	√	√
30-0910-3		Strobe Light	Grimes	√	√
30-0911-3		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-0911-7		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-1		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-11		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-13		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-15		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-3		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-5		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-7		ANTICOLLISION STROBE LIGHT	Grimes	√	√
30-1401-9		ANTICOLLISION STROBE LIGHT	Grimes	√	√
303-006-003	76450-01078-106	DUAL TORQUE INDICATORS	GULL	√	√
303-006-003	76450-01078-106	DUAL TORQUE INDICATOR	GULL	√	√
30-326ET-0		Control Amplifier	Pyrotector	√	√
30-326ET-1		Control Amplifier	Pyrotector	√	√
30-326ET-1		Control Amplifier	Pyrotector	√	√
30-326ET-2		Control Amplifier	Pyrotector	√	√
30-326ET-3		Control Amplifier	Pyrotector	√	√
3057-204-1		T4 INDICATOR	LABEM S.A	√	√
3057-3-134		TORQUEMETER INDICATOR	LABEM	√	√
3057-3-135		TORQUEMETER INDICATOR	LABEM	√	√
3057-3-136		TORQUEMETER INDICATOR	LABEM	√	√
3057-3-136-1		TORQUEMETER INDICATOR	THALES	√	√
3057-3-136-3		TORQUEMETER INDICATOR	THALES	√	√
3057-3-136-4		TORQUEMETER INDICATOR	THALES	√	√
3057-3-136-5		TORQUEMETER INDICATOR	THALES	√	√
3057-3-136-6		TORQUEMETER INDICATOR	LABEM	√	√
3057-3-137		TORQUEMETER INDICATOR	LABEM	√	√
310-007-003	76450-00902-103	DUAL TORQUE INDICATORS	GULL	√	√
310-007-003		Dual Torque Indicator	GULL	√	√
3297-10		Differential Pressure switch	THALES	√	√
3297-10		Differential Pressure switch	THALES	√	√
33776-44869-041		SAR Engage Panel	Sikorsky	√	√
34528H022		POWER UNIT SUPPLY	JPC	√	√
3459A		CONTROL UNIT	L'HOTELLIER	√	√
3459A		CONTROL UNIT	L'HOTELLIER	√	√
3463-2		FIRE ALARM CIRCUIT	L'HOTELLIER	√	√
3463-2		FIRE ALARM CIRCUIT	L'HOTELLIER	√	√
350A-82-1277-02		Tubine Overspeed Detector	Avtech	√	√
3567742-1001	7742-10-A5-1	PRESS TRANSMITTER	Bendix	√	√
3567742-1501	7742-15-A5-1	PRESS TRANSMITTER	Bendix	√	√
3567742-1701	7742-17-A5-1	PRESS TRANSMITTER	Bendix	√	√
3567742-3001	7742-30-A5-1	PRESS TRANSMITTER	Bendix	√	√
3567742-4701	7742-47-A5-1	PRESS TRANSMITTER	Bendix	√	√
356H2802		POWER UNIT SUPPLY	JPC AVIATION	√	√
3571211-9001	25122-B4A-1-A1	FUEL FLOW IND	Bendix	√	√
3571211-9009	25122-B25A-2-A2	FUEL FLOW IND	Bendix	√	√
3571211-9010	25122-A27C-1-A1	FUEL PRESS IND	Bendix	√	√
3571211-9011	25122-A27E-2-A3	PRESS IND	Bendix	√	√
3571211-9012	25122-A30E-1-A1	OIL PRESS IND	Bendix	√	√
3571211-9014	25122-A37A-1-A1	HYD PRESS IND	Bendix	√	√
3571211-9015	25122-A37B-1-A1	PRESS IND	Bendix	√	√
3571211-9016	25122-A37M-2-A2	HYD PRESS IND	Bendix	√	√
3571211-9019	25122-C84C-2-A3	TORQUE PRESS IND	Bendix	√	√
3571211-9020	25122-A2C-1-A1	OIL PRESS IND	Bendix	√	√
3571211-9021	25122-B16A-1-A1	FUEL FLOW IND	Bendix	√	√
3571211-9028	25122-C72A-17-A3	GROSS WT IND	Bendix	√	√
3571211-9032	25122-B57A-1-A2	FUEL FLOW IND	Bendix	√	√
3571211-9035	25122-A15A-1-A2	PRESS IND	Bendix	√	√
3571211-9039	25122-A23F-2-A2	HYD PRESS IND	Bendix	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
3571211-9040	25122-A37R-2-A2	SYNCHRO IND	Bendix	√	√
3571211-9041	25122-B5D-2-A2	FUEL FLOW IND	Bendix	√	√
3571211-9043	25122-B3C-4-A2	FUEL FLOW IND	Bendix	√	√
3571211-9054		FLAP POS IND	Bendix	√	√
3571212-0003	25122-A121C-2B3	TORQUE PRESS IND	Bendix	√	√
3571212-0006	25122-B25B-2-A2	FUEL FLOW IND	Bendix	√	√
3571212-0010		TORQUE INDICATOR	Bendix	√	√
3571212-0011	50-384187-5	TORQUE INDICATOR	Bendix	√	√
3571212-0052	25122-A29B-2-A2	PRESS IND	Bendix	√	√
3571212-0055	25122-A17F-2-A3	PRESS IND	Bendix	√	√
3571251-9110		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9111		Gas Temperature IND.	Allied	√	√
3571251-9111		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9111		GAS TEMPERATURE IND.	Bendix	√	√
3571251-9115		Inter Turbine Temperature Indicator	Allied	√	√
3571251-9115		Inter Turbine Temperature Indicator	BENDIX	√	√
3571251-9119		Gas Temperature IND.	Allied	√	√
3571251-9119		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9119		GAS TEMPERATURE IND.	Bendix	√	√
3571251-9120		TACHOMETER	Allied	√	√
3571251-9120		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9121		Gas Temperature IND.	Allied	√	√
3571251-9121		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9121		GAS TEMPERATURE IND.	Bendix	√	√
3571251-9122		TACHOMETER	Allied	√	√
3571251-9122		Measured Gas Temperature Indicator	BENDIX	√	√
3571251-9123		GAS TEMPERATURE IND.	Bendix	√	√
3571251-9127		TOT INDICATOR	Bendix	√	√
3571251-9129		TOT INDICATOR	Bendix	√	√
3571251-9131		Inter Turbine Temperature IND.	Allied	√	√
3571251-9131		Inter Turbine Temperature Indicator	BENDIX	√	√
3571251-9131		INNER TURBO TEMPERATURE IND.	Bendix	√	√
3571251-9202		Torque Indicator	Allied	√	√
3571251-9207		Torque Indicator	Allied	√	√
3571251-9209		Torque Indicator	Allied	√	√
3571251-9210		Fuel Pressure Indicator	Allied	√	√
3571251-9212		Torque Indicator	Allied	√	√
3571251-9212M		Torque Indicator	Allied	√	√
3571251-9215		Torque Indicator	Allied	√	√
3571251-9216		Torque Indicator	Allied	√	√
3571260-7001		TACHOMETER	Allied	√	√
3571260-7001	C6SC1029-3	TACHOMETER	Bendix	√	√
3571260-8001	C6SC1037-3	TACHOMETER	Bendix	√	√
3571260-8002	C6SC1037-5	TACHOMETER	Bendix	√	√
3571260-8003		TACHOMETER	Bendix	√	√
3571262-5101		Electrical Tachometer IND.	Allied	√	√
3571262-5108		Electrical Tachometer IND.	Allied	√	√
3571262-5109		Electrical Tachometer IND.	Allied	√	√
3571371-6001	212-070-108-003	TRIPLE TACHOMETER	BENDIX	√	√
3571371-6002	212-070-108-005	TRIPLE TACHOMETER	BENDIX	√	√
3571371-9001	212-070-108-007	TRIPLE TACHOMETER	BENDIX	√	√
3571371-9002		TRIPLE TACHOMETER	BENDIX	√	√
3571371-9004		TRIPLE TACHOMETER	BENDIX	√	√
360GC0ZY		RH GENERATOR CONTROL UNIT	THALES	√	√
360GC0ZY		RH GENERATOR CONTROL UNIT	THALES	√	√
360GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
360GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
361GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
361GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
362GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
362GC0ZY01		RH GENERATOR CONTROL UNIT	THALES	√	√
369D24518		DUAL TACHOMETER	Insco	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
369D24518-5		DUAL TACHOMETER	Insco	√	√
369D4518-7		DUAL TACHOMETER	Insco	√	√
369D4518-9		DUAL TACHOMETER	Insco	√	√
369H4516		DUAL TACHOMETER	Insco	√	√
369H4518		DUAL TACHOMETER	Insco	√	√
369H4518-3		DUAL TACHOMETER	Insco	√	√
38221-01-250		HORIZONTAL IND.	THALES	√	√
390ZT01		LIGHT DIMMER	IN-SERVICES	√	√
390ZT01		LIGHT DIMMER	IN-SERVICES	√	√
390ZT01Y01		LIGHT DIMMER	IN-SERVICES	√	√
390ZT01Y01		LIGHT DIMMER	IN-SERVICES	√	√
3911213-9002		MGT Indicator	Allied	√	√
3911213-9005		MGT Indicator	Allied	√	√
3911213-9009		MGT Indicator	Allied	√	√
393008-039		FUEL QTY INDICATOR	SIMMONDS	√	√
393008-040		FUEL QTY INDICATOR	SIMMONDS	√	√
393008-046		FUEL QTY INDICATOR	SIMMONDS	√	√
393008-047		FUEL QTY INDICATOR	SIMMONDS	√	√
393008-082		FUEL QTY INDICATOR	SIMMONDS	√	√
3943333-9001	412-075-010-105	TRIPLE TACHOMETER	BENDIX	√	√
3943333-9002	412-075-010-109	TRIPLE TACHOMETER	BENDIX	√	√
3968D01		Fan	LIEBHERR	√	√
3968D01		Fan	LIEBHERR	√	√
3968D02		Fan	LIEBHERR	√	√
3968D02		Fan	LIEBHERR	√	√
3Z2210M		FRONT PANEL	IN-SERVICES	√	√
4000502-0101	RT-1201A	Radar R/T	Bendix/King	√	√
4000763-3101	RT-131A	Radar R/T	Bendix/King	√	√
4000764-3201	IN-132A	Radar Indicator	Bendix/King	√	√
4000831-0101	RT-1401A	Radar R/T	Bendix/King	√	√
4000831-0102	RT-1401B	Radar R/T	Bendix/King	√	√
4000831-0103	RT-1401B	Radar R/T	Bendix/King	√	√
4000831-0104	RT-1401B	Radar R/T	Bendix/King	√	√
4000831-0105	RT-1401B	Radar R/T	Bendix/King	√	√
4000831-0106	RT-1401B	Radar R/T	Bendix/King	√	√
4000833-0201	IN-1402A	Radar Indicator	Bendix/King	√	√
4000833-0202	IN-1402A	Radar Indicator	Bendix/King	√	√
4000833-0207	IN-1402B	Radar Indicator	Bendix/King	√	√
4000833-0208	IN-1402B	Radar Indicator	Bendix/King	√	√
4000833-0209	IN-1402B	Radar Indicator	Bendix/King	√	√
4000833-0210	IN-1402B	Radar Indicator	Bendix/King	√	√
4000833-0211	IN-1402B	Radar Indicator	Bendix/King	√	√
4000833-0212	IN-1402B	Radar Indicator	Bendix/King	√	√
4000965-0201	IN-1302A	Radar Indicator	Bendix/King	√	√
4000965-0202	IN-1302A	Radar Indicator	Bendix/King	√	√
4000965-0203	IN-1302A	Radar Indicator	Bendix/King	√	√
4000965-0209	IN-1302B	Radar Indicator	Bendix/King	√	√
4000966-0101	RT-1301A	Radar R/T	Bendix/King	√	√
4000966-0104	RT-1301A	Radar R/T	Bendix/King	√	√
4001670-2501	IN-2025A	Radar Color Indicator	Bendix/King	√	√
4001670-2502	IN-2025A	Radar Color Indicator	Bendix/King	√	√
4001670-2503	IN-2025A	Radar Color Indicator	Bendix/King	√	√
4001670-2504	IN-2025A	Radar Color Indicator	Bendix/King	√	√
4001670-2511	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001670-2512	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001670-2513	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001670-2514	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001670-2515	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001670-2516	IN-2025B	Radar Color Indicator	Bendix/King	√	√
4001921-5101	RT-1151A	Radar R/T	Bendix/King	√	√
4001922-5201	IN-1152A	Radar Indicator	Bendix/King	√	√
4001922-5202	IN-1152A	Radar Indicator	Bendix/King	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
4001922-5203	IN-1152A	Radar Indicator	Bendix/King	√	√
4001922-5204	IN-1152A	Radar Indicator	Bendix/King	√	√
4004437-901	RT-220	RADIO ALTIMETER TRANSCEIVER	HONEYWELL	√	√
4004437-902	RT-221	RADIO ALTIMETER TRANSCEIVER	HONEYWELL	√	√
4004437-903	RT-220	RADIO ALTIMETER TRANSCEIVER	HONEYWELL	√	√
403GC01Y01		PROTECTION FEEDER CARD	THALES	√	√
403GCO1Y01		PROTECTION FEEDER CARD	THALES	√	√
412-075-008-101	9813-25-15	DUAL TORQUE IND	CLIFTON	√	√
412-075-008-111	9813-25-21	DUAL TORQUE IND	CLIFTON	√	√
412-075-010-105	3943333-9001	TRIPLE TACHOMETER	BENDIX	√	√
412-075-010-109	3943333-9002	TRIPLE TACHOMETER	BENDIX	√	√
412-375-007-113	DT409-11	TRIPLE TORQUE INDICATOR	VDO	√	√
418-00404-000		MOVEMENT DETECTOR UNIT	SAGEM	√	√
418-00404-001		MOVEMENT DETECTOR UNIT	SAGEM	√	√
418-00404-100		MOVEMENT DETECTOR UNIT	SAGEM	√	√
418-00404-200		MOVEMENT DETECTOR UNIT	SAGEM	√	√
418-00453-102		AFCS CONTROLLER	SAGEM	√	√
418-00453-102		AFCS CONTROLLER	SAGEM	√	√
422GC01Y05		DC GENERATOR UNIT	THALES	√	√
422GC01Y05		DC GENERATOR UNIT	THALES	√	√
422GC01Y06		DC GENERATOR UNIT	THALES	√	√
422GC01Y06		DC GENERATOR UNIT	THALES	√	√
423GC01Y		DC GENERATOR UNIT	THALES	√	√
423GC01Y		DC GENERATOR UNIT	THALES	√	√
423GC01Y02		DC GENERATOR UNIT	THALES	√	√
423GC01Y02		DC GENERATOR UNIT	THALES	√	√
423GC01Y03		DC GENERATOR UNIT	THALES	√	√
423GC01Y03		DC GENERATOR UNIT	THALES	√	√
424GC01Y		DC GENERATOR UNIT	THALES	√	√
424GC01Y		DC GENERATOR UNIT	THALES	√	√
427-00160-000		SYNCHRO AMPLIFIER	SAGEM	√	√
429678-8		SEARCHLIGHT	IN-SERVICES	√	√
4308-1005		Torquemeter	Insco	√	√
4308-1007		Torquemeter	Insco	√	√
4308-1009		Torquemeter	Insco	√	√
4308-3018		Torquemeter	Insco	√	√
4308-3021		Torquemeter	Insco	√	√
4308-3051		Torquemeter	Insco	√	√
4308-3058		Torquemeter	Insco	√	√
45-0148-10		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0148-3		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0148-4		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0148-7		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0148-8		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0148-9		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0241-1		Search Light	GRIMES	√	√
45-0241-11		Search Light	GRIMES	√	√
45-0241-3		Search Light	GRIMES	√	√
45-0241-5		Search Light	GRIMES	√	√
45-0241-7		Search Light	GRIMES	√	√
45-0241-9		Search Light	GRIMES	√	√
45-0351-1		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0351-2		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0351-3		RETRACTABLE LANDING LIGHT	Grimes	√	√
45-0351-4		RETRACTABLE LANDING LIGHT	Grimes	√	√
453-5000-XXX	C406-2	ARTEX ELT	ARTEX	√	√
453-5001-XXX	C406-2HM	ARTEX ELT	ARTEX	√	√
453-5002-XXX	C406-1	ARTEX ELT	ARTEX	√	√
453-5003-XXX	C406-1HM	ARTEX ELT	ARTEX	√	√
453-5012-XXX	G406-4	ARTEX ELT	ARTEX	√	√
453-5060-XXX	C406-N	ARTEX ELT	ARTEX	√	√
453-5061-XXX	C406-N HM	ARTEX ELT	ARTEX	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
453TS01Y		LANDING GEAR POSITION INDICATOR	IN-SERVICES	√	√
453TS01Y		LANDING GEAR POSITION INDICATOR	THALES	√	√
455-6603 -XXX	ME406	ARTEX ELT	ARTEX	√	√
455-6604-XXX	ME406HM	ARTEX ELT	ARTEX	√	√
455TS01Y		LANDING GEAR POSITION INDICATOR	IN-SERVICES	√	√
455TS01Y		LANDING GEAR POSITION INDICATOR	THALES	√	√
46-90330		Fan	LMB	√	√
46-90330		Fan	LMB	√	√
47-711-021-1		DUAL TACHOMETER	Insco	√	√
5008-3001		Turbine Outlet Temp. Ind.	Insco	√	√
501-1228-()	PS-835	Emergency Power Supply	Goodrich	√	√
501-1712-01	PS-855A	Emergency Power Supply	Goodrich	√	√
501-1712-02	PS-855B	Emergency Power Supply	Goodrich	√	√
501-1712-03	PS-855C	Emergency Power Supply	Goodrich	√	√
501-1719-01	PS-850A	Emergency Power Supply	Goodrich	√	√
501-1719-02	PS-850B	Emergency Power Supply	Goodrich	√	√
5018-111-00-10		ENGINE SHUTDOWN DETECTION	Brian Leroux	√	√
5021-3001		Turbine Outlet Temp. Ind.	Insco	√	√
5021-3002		Turbine Outlet Temp. Ind.	Insco	√	√
5021-3003		Turbine Outlet Temp. Ind.	Insco	√	√
5029-3003		TOT GAUGE	INSCO	√	√
504-0010-907	500DC	ATTITUDE GYRO	L-3	√	√
505-0031-901	205-1A	DIRECTIONAL GYRO	L-3	√	√
505-0031-902	205-1AL	DIRECTIONAL GYRO	L-3	√	√
505-0031-903	205-1B	DIRECTIONAL GYRO	L-3	√	√
505-0031-904	205-1BL	DIRECTIONAL GYRO	L-3	√	√
505-0031-905	205-1C	DIRECTIONAL GYRO	L-3	√	√
505-0031-906	205-1CL	DIRECTIONAL GYRO	L-3	√	√
505-0031-907	205-2A	DIRECTIONAL GYRO	L-3	√	√
505-0031-908	205-2AL	DIRECTIONAL GYRO	L-3	√	√
505-0031-909	205-2B	DIRECTIONAL GYRO	L-3	√	√
505-0031-910	205-2BL	DIRECTIONAL GYRO	L-3	√	√
505-0031-911	205-2C	DIRECTIONAL GYRO	L-3	√	√
505-0031-912	205-2CL	DIRECTIONAL GYRO	L-3	√	√
505-0031-916	205-1BC	DIRECTIONAL GYRO	L-3	√	√
505-0031-926	205-6BL	DIRECTIONAL GYRO	L-3	√	√
505-0031-927	205-1D	DIRECTIONAL GYRO	L-3	√	√
505-0031-928	205-1BLF	DIRECTIONAL GYRO	L-3	√	√
505-0031-929	205-1BF	DIRECTIONAL GYRO	L-3	√	√
505-0031-930	205-7BL	DIRECTIONAL GYRO	L-3	√	√
505-0031-931	205-1BLD	DIRECTIONAL GYRO	L-3	√	√
505-0031-933	205-1BLR	DIRECTIONAL GYRO	L-3	√	√
50579-3		Hydraulic Pressure Transmitter	Kratos	√	√
5108-110-00-10		ENGINE SHUTDOWN DETECTION	THALES	√	√
51530-006		DC Generator Control Unit	LSI	√	√
51530-006A		DC Generator Control Unit	LSI	√	√
51530-006A	76550-09006-105	DC Generator Control Unit	LSI	√	√
51530-006B	76550-09006-106	DC Generator Control Unit	LSI	√	√
51530-006B	76550-09006-106	DC Generator Control Unit	LSI	√	√
51530-007		DC Generator Control Unit	LSI	√	√
51530-007A		DC Generator Control Unit	LSI	√	√
51530-007B		DC Generator Control Unit	LSI	√	√
51530-008		DC Generator Control Unit	LSI	√	√
51539-002A		GENERATOR CONTROL UNIT	TRW	√	√
51539-002B		GENERATOR CONTROL UNIT	TRW	√	√
51539-002M		GENERATOR CONTROL UNIT	TRW	√	√
51539-002N		Generator Control Unit	LSI	√	√
51539-002N		GENERATOR CONTROL UNIT	TRW	√	√
521 352		GENERATOR CONTROL UNIT ASSEMBLY	THALES	√	√
522-2447-005	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-015	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-025	313N-2D	NAV Control	Rockwell Collins	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
522-2447-035	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-046	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-048	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-050	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-051	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-052	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-053	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-055	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-056	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-057	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-058	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-059	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-205	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-215	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-225	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-235	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-248	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-250	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-251	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-252	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-253	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-255	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-256	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-257	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-259	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-260	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-261	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-262	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-263	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-264	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-266	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-267	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-268	313N-2	NAV Control	Rockwell Collins	√	√
522-2447-269	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-271	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-272	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-273	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-556	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-557	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-563	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-564	313N-2D	NAV Control	Rockwell Collins	√	√
522-2447-571	313N-2D	NAV Control	Rockwell Collins	√	√
522-2599-000	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-001	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-002	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-003	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-004	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-500	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-501	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-502	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-503	313N-5	NAV Control	Rockwell Collins	√	√
522-2599-504	313N-5	NAV Control	Rockwell Collins	√	√
522-3616-200	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-201	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-202	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-204	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-501	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-502	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-503	313N-4D	NAV Control	Rockwell Collins	√	√
522-3616-504	313N-4D	NAV Control	Rockwell Collins	√	√
522-3617-000	313N-5A	NAV Control	Rockwell Collins	√	√
522-3617-001	313N-5A	NAV Control	Rockwell Collins	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
522-3617-002	313N-5A	NAV Control	Rockwell Collins	√	√
522-3617-003	313N-5A	NAV Control	Rockwell Collins	√	√
522-3617-500	313N-5A	NAV Control	Rockwell Collins	√	√
522-3617-503	313N-5A	NAV Control	Rockwell Collins	√	√
528-0023-01		Cargo Hook	On-Board	√	√
5306-155-00-10		OIL PRESSURE INDICATOR	THALES	√	√
5306-160-00-11		OIL PRESSURE INDICATOR	THALES	√	√
5306-161-20-10		OIL PRESSURE INDICATOR	THALES	√	√
5306-166-00-10		OIL PRESSURE INDICATOR	THALES	√	√
5306-167-20-11		OIL PRESSURE INDICATOR	THALES	√	√
5306-255-00-11		ENGINE OIL TEMPERATURE INDICATOR	THALES	√	√
5306-256-00-10		OIL PRESSURE INDICATOR	THALES	√	√
5306-261-00-11		ENGINE OIL TEMPERATURE INDICATOR	THALES	√	√
5306-265-00-10		ENGINE OIL TEMPERATURE INDICATOR	THALES	√	√
5306-266-20-10		ENGINE OIL TEMPERATURE INDICATOR	THALES	√	√
5306-266-20-11		ENGINE OIL TEMPERATURE INDICATOR	THALES	√	√
5309-155-00-11		FUEL PRESSURE INDICATOR	THALES	√	√
5309-158-00-10		FUEL PRESSURE INDICATOR	THALES	√	√
5309-159-20-10		FUEL PRESSURE INDICATOR	THALES	√	√
5309-159-20-11		FUEL PRESSURE INDICATOR	THALES	√	√
55-0510-1-1		INVERTER	SELA	√	√
55-0510-1-1		INVERTER	SELA	√	√
55-0510-2		INVERTER	SELA	√	√
55-0510-2		INVERTER	SELA	√	√
55-0511-2		INVERTER	SELA	√	√
55-0511-2		INVERTER	SELA	√	√
55-0520-4		INVERTER	SELA	√	√
55-0520-4		INVERTER	SELA	√	√
55-0521-4		INVERTER	SELA	√	√
55-0521-4		INVERTER	SELA	√	√
55-0522-4		INVERTER	SELA	√	√
55-0522-4		INVERTER	SELA	√	√
55-0530-6		INVERTER	SELA	√	√
55-0530-6		INVERTER	SELA	√	√
55-0530-6-1-X		INVERTER	SELA	√	√
55-0530-6-1-X		INVERTER	SELA	√	√
55-0531-6		INVERTER	SELA	√	√
55-0531-6		INVERTER	SELA	√	√
55-0532-6		INVERTER	SELA	√	√
55-0532-6		INVERTER	SELA	√	√
55-0533-6		INVERTER	SELA	√	√
55-0533-6		INVERTER	SELA	√	√
561 7-363-80-1 0		OIL PRESSURE AND TEMPERATURE INDICATOR	THALES	√	√
561 7-367-80-1 0		OIL PRESSURE AND TEMPERATURE INDICATOR	THALES	√	√
56171353-99-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
56171353-99-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-352-91-11		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-352-91-11		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-352-91-11		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-352-91-12		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-352-91-12		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-352-91-12		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-353-99-10		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-355-91-11		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-355-91-11		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-355-91-11		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-357-91-10		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-357-91-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-357-91-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-358-91-10		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-358-91-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-358-91-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
5617-359-80-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-359-80-10		PRESSURE TEMPERATURE INDICATOR	THALES	√	√
5617-359-91-10		DUAL ENGINE OIL PRESS.TEMP.IND.	THALES	√	√
5617-363-80-1 0		OIL PRESSURE AND TEMPERATURE INDICATOR	THALES	√	√
5617-367-80-1 0		OIL PRESSURE AND TEMPERATURE INDICATOR	THALES	√	√
5626-518-00		T4 INDICATOR	THALES	√	√
5626-522-00		T4 INDICATOR	THALES	√	√
5626-523-91		T4 INDICATOR	THALES	√	√
5626-524-00-00		T4 INDICATOR	THALES	√	√
5626-525-0		T4 INDICATOR	THALES	√	√
5626-555-00-11		T4 INDICATOR	THALES	√	√
5633-619-00-10		NG INDICATOR	THALES	√	√
5633-619-00-11		NG INDICATOR	THALES	√	√
5633-619-00-12		NG INDICATOR	THALES	√	√
5633-622-20-10		NG INDICATOR	THALES	√	√
5633-622-20-11		NG INDICATOR	THALES	√	√
5633-71 9-20-00		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5633-71 9-20-00		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5633-716-80-10		NG SPEED AND LIMIT DEVIATION IND.	BRION - LEROUX	√	√
5633-716-80-10		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5633-716-80-10		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5633-717-20-10		NG SPEED AND LIMIT DEVIATION IND.	BRION - LEROUX	√	√
5633-717-20-10		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5633-717-20-10		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
5637-551-00-12		T4 INDICATOR	THALES	√	√
5637-553-00-10		T4 INDICATOR	THALES	√	√
5637-553-00-11		T4 INDICATOR	THALES	√	√
5637-554-20-10		T4 INDICATOR	THALES	√	√
5637-554-20-11		T4 INDICATOR	THALES	√	√
5637-560-00-10		T4 INDICATOR	THALES	√	√
5637-562-20-10		T4 INDICATOR	THALES	√	√
5638-710-20-10		NR-NTL INDICATORS	THALES	√	√
5638-710-20-11		NR-NTL INDICATORS	THALES	√	√
5638-710-20-12		NR-NTL INDICATORS	THALES	√	√
5677-752-00-10		TORQUEMETER INDICATOR	THALES	√	√
5677-752-00-11		TORQUEMETER INDICATOR	THALES	√	√
5677-752-00-12		TORQUEMETER INDICATOR	THALES	√	√
5677-753-20-10		TORQUEMETER INDICATOR	THALES	√	√
5677-753-20-11		TORQUEMETER INDICATOR	THALES	√	√
5677-753-20-12		TORQUEMETER INDICATOR	THALES	√	√
5677-763-20-10		TORQUEMETER INDICATOR	THALES	√	√
5677-771-00-10		TORQUEMETER INDICATOR	THALES	√	√
57-02-21		INVERTER	SELA	√	√
57-02-21		INVERTER	SELA	√	√
57-03-11		INVERTER	ABADIE	√	√
574-074-140-003		SCAS/AFCS Control Panel	BELL	√	√
579-90R2987		UNIT AUDIO WARNING DEVICE	SOCA SUD	√	√
58-04-1-9		INVERTER	ABADIE	√	√
58-05-1-2		INVERTER	ABADIE	√	√
58-07-2		INVERTER	ABADIE	√	√
5813-700-00-10		NTL-NR INDICATOR (FOR L1)	THALES	√	√
5813-700-00-11		NTL-NR INDICATOR (FOR L1)	THALES	√	√
5813-700-00-12		NTL-NR INDICATOR (FOR L1)	THALES	√	√
5813-701-00-00		NTL-NR INDICATOR (FOR L1)	THALES	√	√
5876-703-00-10		NR INDICATOR	THALES	√	√
5876-704-20-10		NR INDICATOR	THALES	√	√
5876-704-20-11		NR INDICATOR	THALES	√	√
5876-705-00-10		NR INDICATOR	THALES	√	√
60-0540-1		Rechargeable Power Failure Power Supply	Grimes	√	√
60-1211-1RF		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
60-1211-3RF		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1211-5RF		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-1		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-1LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-5		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-5LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-7		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1321-7LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1411-1		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1411-1LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1411-3		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-1411-3LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-2388-1		POWER SUPPLY, FLASHTUBE ANTICOLLISION LIGHT	Grimes	√	√
60-2388-101		POWER SUPPLY, FLASHTUBE ANTICOLLISION LIGHT	Grimes	√	√
60-3274-1		Strobe Light Power Supply	Grimes	√	√
60-3274-5		Strobe Light Power Supply	Grimes	√	√
60-3368-7		POWER SUPPLY – STROBE LIGHT	Grimes	√	√
60-4068-1		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4068-1LB		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4222-1		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4222-3		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4222-5		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4222-7		EMERGENCY EXIT LIGHT POWER SUPPLY	Grimes	√	√
60-4791-1		POWER SUPPLY – STROBE LIGHT	Grimes	√	√
60-4791-3		POWER SUPPLY – STROBE LIGHT	Grimes	√	√
60-4983-3		POWER SUPPLY – STROBE LIGHT	Grimes	√	√
61015-008-1		DUAL TORQUE INDICATORS	THALES	√	√
61474-103-1		TACHOMETER INDICATOR	THALES	√	√
61474-103-1		TACHOMETER INDICATOR	THALES	√	√
61474-103-2		TACHOMETER INDICATOR	THALES	√	√
61474-103-2		TACHOMETER INDICATOR	THALES	√	√
61474-103-3		TACHOMETER INDICATOR	THALES	√	√
61474-103-3		TACHOMETER INDICATOR	THALES	√	√
61474-103-4		TACHOMETER INDICATOR	THALES	√	√
61474-103-4		TACHOMETER INDICATOR	THALES	√	√
61474-108-1		TACHOMETER INDICATOR	THALES	√	√
61474-108-1		TACHOMETER INDICATOR	THALES	√	√
61474-108-2		TACHOMETER INDICATOR	THALES	√	√
61474-108-2		TACHOMETER INDICATOR	THALES	√	√
61474-112-1		TACHOMETER INDICATOR	THALES	√	√
61474-112-1		TACHOMETER INDICATOR	THALES	√	√
61474-112-2		TACHOMETER INDICATOR	THALES	√	√
61474-112-2		TACHOMETER INDICATOR	THALES	√	√
61474-114-1		TACHOMETER INDICATOR	THALES	√	√
61474-114-1		TACHOMETER INDICATOR	THALES	√	√
61474-130-1		TACHOMETER INDICATOR	THALES	√	√
61474-130-1		TACHOMETER INDICATOR	THALES	√	√
61474-130-2		TACHOMETER INDICATOR	THALES	√	√
61474-130-2		TACHOMETER INDICATOR	THALES	√	√
61474-131-2		TACHOMETER INDICATOR	THALES	√	√
61474-131-2		TACHOMETER INDICATOR	THALES	√	√
61474-132-1		TACHOMETER INDICATOR	THALES	√	√
61474-132-1		TACHOMETER INDICATOR	THALES	√	√
61474-133-1		TACHOMETER INDICATOR	THALES	√	√
61474-133-1		TACHOMETER INDICATOR	THALES	√	√
61474-134-1		TACHOMETER INDICATOR	THALES	√	√
61474-134-1		TACHOMETER INDICATOR	THALES	√	√
61474-135-1		TACHOMETER INDICATOR	THALES	√	√
61474-135-1		TACHOMETER INDICATOR	THALES	√	√
61476-402-1		NR-N/TL DOUBLE INDICATOR	THALES	√	√
61476-403-1		NR-N/TL DOUBLE INDICATOR	THALES	√	√
61533-112-1		TEMPERATURE INDICATOR	THALES	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
61533-112-1		TEMPERATURE INDICATOR	THALES	√	√
61533-123-1		TEMPERATURE INDICATOR	THALES	√	√
61533-123-1		TEMPERATURE INDICATOR	THALES	√	√
622-1032-001	699Z-1	RMI Driver	Collins	√	√
622-1204-001	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-002	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-003	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-004	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-005	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-006	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-007	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-008	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1204-010	339H-4	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-001	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-002	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-003	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-004	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-005	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-1205-006	339H-4A	Radio Altitude Indicator	Rockwell Collins	√	√
622-2499-004	IND-250	Radar Indicator	Rockwell Collins	√	√
622-2499-005	IND-250	Radar Indicator	Rockwell Collins	√	√
622-2501-001	ANT-312	Radar Antenna	Rockwell Collins	√	√
622-2502-001	ANT-310	Radar Antenna	Rockwell Collins	√	√
622-2504-001	ANT-318	Radar Antenna	Rockwell Collins	√	√
622-2506-001	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-002	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-003	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-004	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-005	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-006	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-007	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-008	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-009	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-010	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-011	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-012	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-013	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-014	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2506-015	RMI 36	Radio Magnetic Indicator	Collins	√	√
622-2855-001	ALT-55B	Radio Altimeter	Rockwell Collins	√	√
622-2855-002	ALT-55B	Radio Altimeter	Rockwell Collins	√	√
622-2855-011	ALT-55B	Radio Altimeter	Rockwell Collins	√	√
622-2855-012	ALT-55B	Radio Altimeter	Rockwell Collins	√	√
622-2937-001	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-002	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-003	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-004	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-005	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-008	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2937-009	ALI-55	ALI-55 Radio Altitude Indicator	Rockwell Collins	√	√
622-2938-001	ALI-55A	ALI-55A Radio Altimeter Indicator	Rockwell Collins	√	√
622-2938-002	ALI-55A	ALI-55A Radio Altimeter Indicator	Rockwell Collins	√	√
622-2938-003	ALI-55A	ALI-55A Radio Altimeter Indicator	Rockwell Collins	√	√
622-2938-004	ALI-55A	ALI-55A Radio Altimeter Indicator	Rockwell Collins	√	√
622-3201-001	ALT-50A	Radio Altimeter	Rockwell Collins	√	√
622-3201-002	ALT-50A	Radio Altimeter	Rockwell Collins	√	√
622-3201-011	ALT-50A	Radio Altimeter	Rockwell Collins	√	√
622-3201-012	ALT-50A	Radio Altimeter	Rockwell Collins	√	√
622-3338-001	WXT-250	Radar Transceiver	Rockwell Collins	√	√
622-4022-001	WXT-250A	Radar Transceiver	Rockwell Collins	√	√
622-4027-002	IND-250A	Radar Indicator	Rockwell Collins	√	√
622-4160-001	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
622-4160-002	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-003	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-004	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-005	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-006	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-007	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-008	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-011	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-012	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-013	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-014	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-015	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-016	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-017	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4160-018	DRI-55	Radio Altitude Indicator	Rockwell Collins	√	√
622-4523-001	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-002	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-003	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-004	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-005	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-006	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-007	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-008	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-009	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-010	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-011	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-012	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-013	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-014	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-015	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-016	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-017	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-018	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-201	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-202	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-203	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-204	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-205	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-206	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-207	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-208	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-209	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-210	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-211	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-212	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-213	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-214	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-215	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-216	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-217	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4523-218	CTL-20	VHF Control Head	Rockwell Collins	√	√
622-4524-041	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-042	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-043	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-044	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-049	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-050	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-051	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-052	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-053	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-054	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-055	CTL-30	NAV Control Head	Rockwell Collins	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
622-4524-056	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-057	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-058	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-059	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-060	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-061	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-062	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-063	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-064	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-065	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-066	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-067	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-068	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-073	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-074	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-075	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-076	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-077	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-078	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-079	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-080	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-085	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-086	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-087	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-088	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-089	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-090	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-091	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-092	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-093	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-094	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-095	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-096	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-097	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-098	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-099	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-100	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-101	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-102	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-103	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-104	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-105	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-106	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-107	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-108	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-109	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-110	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-111	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-112	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-277	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-278	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4524-279	CTL-30	NAV Control Head	Rockwell Collins	√	√
622-4526-001	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-002	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-003	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-004	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-005	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-006	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-007	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-008	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-009	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-010	CTL-60	ADF Control Head	Rockwell Collins	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
622-4526-011	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-012	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-013	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-014	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-015	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-016	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-017	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-018	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-019	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-020	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-021	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-022	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-023	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-024	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-025	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-026	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-027	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-028	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-029	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-030	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-031	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-032	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-033	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4526-034	CTL-60	ADF Control Head	Rockwell Collins	√	√
622-4527-001	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-002	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-003	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-004	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-005	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-006	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-007	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-008	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-009	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-010	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-011	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-012	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-013	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-014	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-015	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-016	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-017	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-018	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-019	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-020	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4527-021	CTL-90	ATC Transponder Control Head	Rockwell Collins	√	√
622-4938-001	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-002	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-003	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-004	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-005	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-006	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-007	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-021	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-022	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-023	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-024	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-025	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-026	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-4938-027	RMI-30	Radio Magnetic Indicator	Rockwell Collins	√	√
622-5367-001	ALI-55B	ALI-55B Radio Altimeter Indicator	Rockwell Collins	√	√
622-6502-001	ANT-310A	Radar Antenna	Rockwell Collins	√	√
622-6513-001	ANT-312A	Radar Antenna	Rockwell Collins	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
622-6633-001	ANT-318A	Radar Antenna	Rockwell Collins	√	√
622-7444-001	ANT-310A	Radar Antenna	Rockwell Collins	√	√
641 40-953-1		ALTIMETER	THALES	√	√
641 40-971 -1		ALTIMETER	THALES	√	√
64140-953-1		ALTIMETER	THALES	√	√
64140-971 -1		ALTIMETER	THALES	√	√
64251-409-1		PRESSURE TRANSMITTERS	THALES	√	√
64251-409-2		PRESSURE TRANSMITTERS	THALES	√	√
64251-903-2	704A47620019	PRESSURE XMTR	THALES	√	√
64279-001-1		PRESSURE TRANSDUCER	THALES	√	√
64279-001-2		PRESSURE TRANSDUCER	THALES	√	√
64279-004-1		PRESSURE TRANSDUCER	THALES	√	√
64500-021-1		TACHOMETER INDICATOR	THALES	√	√
64500-021-1		TACHOMETER INDICATOR	THALES	√	√
64500-021-2		TACHOMETER INDICATOR	THALES	√	√
64500-021-2		TACHOMETER INDICATOR	THALES	√	√
64500-101-1		TACHOMETER INDICATOR	THALES	√	√
64500-101-1		TACHOMETER INDICATOR	THALES	√	√
64500-101-2		TACHOMETER INDICATOR	THALES	√	√
64500-101-2		TACHOMETER INDICATOR	THALES	√	√
64511-103-1		TACHOMETER INDICATOR	THALES	√	√
64536-500-1		TACHOMETER INDICATOR	THALES	√	√
64536-501 -1		TACHOMETER INDICATOR	THALES	√	√
64538-068-1		TACHOMETER INDICATOR	THOMSON-CSF	√	√
64751-003-2		Fuel Quantity Transmitter	Thales	√	√
64751-003-3		Fuel Quantity Transmitter	Thales	√	√
64751-101-1		Fuel Quantity Transmitter	Thales	√	√
64757-100-2		GAUGE TRANSMITTER	THALES	√	√
64757-101-2		GAUGE TRANSMITTER	THALES	√	√
64807-602-1		TEMPERATURE INDICATOR	THALES	√	√
64807-602-1		TEMPERATURE INDICATOR	THALES	√	√
64807-605-1		TEMPERATURE INDICATOR	THALES	√	√
64807-605-1		TEMPERATURE INDICATOR	THALES	√	√
64807-614-1		TEMPERATURE INDICATOR	THALES	√	√
64807-614-1		TEMPERATURE INDICATOR	THALES	√	√
64807-615-1		TEMPERATURE INDICATOR	THALES	√	√
64807-615-1		TEMPERATURE INDICATOR	THALES	√	√
64807-616-1		TEMPERATURE INDICATOR	THALES	√	√
64807-616-1		TEMPERATURE INDICATOR	THALES	√	√
64809-410-1		PRESSURE INDICATOR	THALES	√	√
64809-410-1		PRESSURE INDICATOR	THALES	√	√
64809-505-1		PRESSURE INDICATOR	THALES	√	√
64809-505-1		PRESSURE INDICATOR	THALES	√	√
64809-506-1		PRESSURE INDICATOR	THALES	√	√
64809-506-1		PRESSURE INDICATOR	THALES	√	√
64809-508-1		PRESSURE INDICATOR	THALES	√	√
64809-508-1		PRESSURE INDICATOR	THALES	√	√
64809-509-1		PRESSURE INDICATOR	THALES	√	√
64809-509-1		PRESSURE INDICATOR	THALES	√	√
64809-522-1		PRESSURE INDICATOR	THALES	√	√
64809-522-1		PRESSURE INDICATOR	THALES	√	√
64809-523-1		PRESSURE INDICATOR	THALES	√	√
64809-523-1		PRESSURE INDICATOR	THALES	√	√
64809-525-1		PRESSURE INDICATOR	THALES	√	√
64809-525-1		PRESSURE INDICATOR	THALES	√	√
64809-526-1		PRESSURE INDICATOR	THALES	√	√
64809-526-1		PRESSURE INDICATOR	THALES	√	√
64809-602-1		PRESSURE INDICATOR	THALES	√	√
64809-602-1		PRESSURE INDICATOR	THALES	√	√
64809-605-1		PRESSURE INDICATOR	THALES	√	√
64809-605-1		PRESSURE INDICATOR	THALES	√	√
64809-610-1		PRESSURE INDICATOR	THALES	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
64809-610-1		PRESSURE INDICATOR	THALES	√	√
64809-615-1		PRESSURE INDICATOR	THALES	√	√
64809-615-1		PRESSURE INDICATOR	THALES	√	√
64818-019-1		OIL PRESSURE INDICATOR	THALES	√	√
64818-300-1		FUEL PRESSURE INDICATOR	THALES	√	√
64818-303-1		FUEL PRESSURE INDICATOR	THALES	√	√
64818-307-1		FUEL PRESSURE INDICATOR	THALES	√	√
64970-000-2		TACHOMETER INDICATOR	THALES	√	√
64970-000-2		TACHOMETER INDICATOR		√	√
64970-001-1		TACHOMETER INDICATOR	THALES	√	√
64970-001-1		TACHOMETER INDICATOR	THALES	√	√
6501-1001		TACHOMETER	Insco	√	√
6501-1005		TACHOMETER	Insco	√	√
6501-1010		TACHOMETER	Insco	√	√
6501-1011		TACHOMETER	Insco	√	√
6501-1068		TACHOMETER	Insco	√	√
6501-2004		TACHOMETER	Insco	√	√
6501-3003		TACHOMETER	Insco	√	√
6501-3007		TACHOMETER	Insco	√	√
6501-3008		TACHOMETER	Insco	√	√
6501-3009		TACHOMETER	Insco	√	√
6501-3018		TACHOMETER	Insco	√	√
6501-3034		TACHOMETER	Insco	√	√
6501-8140		TACHOMETER	Insco	√	√
6502-1001		DUAL TACHOMETER	Insco	√	√
6502-1002		DUAL TACHOMETER	Insco	√	√
6502-1006		DUAL TACHOMETER	Insco	√	√
6502-1008		DUAL TACHOMETER	Insco	√	√
6502-1009		DUAL TACHOMETER	Insco	√	√
6502-1011		DUAL TACHOMETER	Insco	√	√
6502-1013		DUAL TACHOMETER	Insco	√	√
6502-1014		DUAL TACHOMETER	Insco	√	√
6502-1019		DUAL TACHOMETER	Insco	√	√
6502-1024		DUAL TACHOMETER	Insco	√	√
6502-1032		DUAL TACHOMETER	Insco	√	√
6502-1033		DUAL TACHOMETER	Insco	√	√
6502-1034		DUAL TACHOMETER	Insco	√	√
6502-1038		DUAL TACHOMETER	Insco	√	√
6502-1041		DUAL TACHOMETER	Insco	√	√
6502-1053		DUAL TACHOMETER	Insco	√	√
6502-1055		DUAL TACHOMETER	Insco	√	√
6502-2004		DUAL TACHOMETER	Insco	√	√
6502-3003		DUAL TACHOMETER	Insco	√	√
6502-3010		DUAL TACHOMETER	Insco	√	√
6502-3031		DUAL TACHOMETER	Insco	√	√
6502-3046		DUAL TACHOMETER	Insco	√	√
6503A-1009		TACHOMETER	Insco	√	√
6503A-1015		TACHOMETER	Insco	√	√
6503A-1022		TACHOMETER	Insco	√	√
6503A-1058		TACHOMETER	Insco	√	√
6503A-1073	704A-47-612-025	TACHOMETER	Insco	√	√
6503A-1097		TACHOMETER	Insco	√	√
6503A-1175		TACHOMETER	Insco	√	√
6503A-3043		TACHOMETER	Insco	√	√
6503A-3045		TACHOMETER	Insco	√	√
6503A-3085		TACHOMETER	Insco	√	√
6503A-3088		TACHOMETER	Insco	√	√
6503A-3101		TACHOMETER	Insco	√	√
6503A-3121		TACHOMETER	Insco	√	√
6503A-3122		TACHOMETER	Insco	√	√
6503A-3184		TACHOMETER	Insco	√	√
65-0878-1		Annunciator Panel	Grimes	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
65-0878-3		Annunciator Panel	Grimes	√	√
65-0879-1		Annunciator Panel	Grimes	√	√
65-0879-3		Annunciator Panel	Grimes	√	√
65-0879-5		Annunciator Panel	Grimes	√	√
684-4022-100		STATIC INVERTER SINGLE PHASE	THALES	√	√
684-4143-100		STATIC INVERTER	AUXILEC	√	√
684-4143-200		STATIC INVERTER	AUXILEC	√	√
686-4027-200		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-200		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-300		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-300		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-400		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-400		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-500		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-500		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-600		LANDING GEAR CONTROL UNIT	THALES	√	√
686-4027-600		LANDING GEAR CONTROL UNIT	THALES	√	√
6ZZ210M		FRONT PANEL	IN-SERVICES	√	√
7000839-901	RA-315	Radio Altitude Indicator	Honeywell	√	√
7000839-902	RA-315	Radio Altitude Indicator	Honeywell	√	√
7000839-903	RA-315	Radio Altitude Indicator	Honeywell	√	√
7000839-904	RA-335	Radio Altitude Indicator	Honeywell	√	√
7000839-905	RA-335	Radio Altitude Indicator	Honeywell	√	√
7000839-906	RA-315	Radio Altitude Indicator	Honeywell	√	√
7000839-922	RA-315	Radio Altitude Indicator	Honeywell	√	√
7000839-923	RA-335	Radio Altitude Indicator	Honeywell	√	√
70-0158-1		Dimmer Control	Grimes	√	√
70-0158-3		Dimmer Control	Grimes	√	√
70-0158-5		Dimmer Control	Grimes	√	√
7001840-901	RT-300	Radio Altimeter	Honeywell	√	√
7001840-902	RT-300	Radio Altimeter	Honeywell	√	√
7001840-903	RT-300	Radio Altimeter	Honeywell	√	√
7001840-905	RT-300	Radio Altimeter	Honeywell	√	√
7001840-906	RT-300	Radio Altimeter	Honeywell	√	√
7001840-908	RT-300	Radio Altimeter	Honeywell	√	√
7001840-909	RT-300	Radio Altimeter	Honeywell	√	√
7001840-911	RT-300	Radio Altimeter	Honeywell	√	√
7001840-912	RT-300	Radio Altimeter	Honeywell	√	√
7001840-913	RT-300	Radio Altimeter	Honeywell	√	√
7001840-914	RT-300	Radio Altimeter	Honeywell	√	√
7001840-915	RT-300	Radio Altimeter	Honeywell	√	√
7001840-916	RT-300	Radio Altimeter	Honeywell	√	√
7001840-917	RT-300	Radio Altimeter	Honeywell	√	√
7001840-918	RT-300	Radio Altimeter	Honeywell	√	√
7001840-922	RT-300	Radio Altimeter	Honeywell	√	√
7001840-924	RT-300	Radio Altimeter	Honeywell	√	√
7001840-926	RT-300	Radio Altimeter	Honeywell	√	√
7001840-928	RT-300	Radio Altimeter	Honeywell	√	√
7001840-931	RT-300	Radio Altimeter	Honeywell	√	√
7001840-932	RT-300	Radio Altimeter	Honeywell	√	√
7001840-934	RT-300	Radio Altimeter	Honeywell	√	√
7001840-936	RT-300	Radio Altimeter	Honeywell	√	√
7001840-937	RT-300	Radio Altimeter	Honeywell	√	√
7001840-938	RT-300	Radio Altimeter	Honeywell	√	√
70-0366-1		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√
70-0366-11		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√
70-0366-3		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√
70-0366-5		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√
70-0366-7		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√
70-0366-9		FLUORESCENT LAMP BALLAST ASSEMBLY	Grimes	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
70-0424-1		EMERGENCY EVACUATION PANEL	Grimes	√	√
704A46-814-049		Light Graduator	S.N.I.R.G.E.	√	√
704A-47-612-025	6503A-1073	TACHOMETER	Insco	√	√
706-902-2		AMPLIFIERS	IN-SERVICES	√	√
706-902-2		AMPLIFIERS	IN-SERVICES	√	√
706-902-3		AMPLIFIERS	IN-SERVICES	√	√
706-902-3		AMPLIFIERS	IN-SERVICES	√	√
706-902-4		AMPLIFIERS	IN-SERVICES	√	√
706-902-4		AMPLIFIERS	IN-SERVICES	√	√
706-928-1		AMPLIFIERS	IN-SERVICES	√	√
706-928-1		AMPLIFIERS	IN-SERVICES	√	√
706-928-2		AMPLIFIERS	IN-SERVICES	√	√
706-928-2		AMPLIFIERS	IN-SERVICES	√	√
706-928-3		AMPLIFIERS	IN-SERVICES	√	√
706-928-3		AMPLIFIERS	IN-SERVICES	√	√
7125-1		Rate Transmitter	Midland-Ross	√	√
716-654-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-654-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-654-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-654-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-655-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-655-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-655-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-655-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-656-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-656-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-656-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-656-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-657-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-657-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-657-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-657-5		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716673-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716673-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716674-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716674-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716675-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716675-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716676-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716676-2		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716-680-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-680-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-680-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-680-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716681-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716681-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716-754-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-754-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-755-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-755-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-756-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-756-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716757-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716757-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716758-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716758-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716759-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716759-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716-760-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
716-760-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-760-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-760-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-761-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-761-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-761-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-761-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-762-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-762-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-762-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-762-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-763-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-763-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-763-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-763-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-764-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-764-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-765-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-765-3		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-765-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716-765-4		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
716766-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716766-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716767-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716767-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716768-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716768-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716769-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716769-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716770-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716770-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716771-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
716771-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
718-849-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-849-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-980-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-980-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-981-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-981-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-982-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-982-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-983-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-983-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-984-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-984-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-985-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-985-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-986-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
718-986-1		TANK CONTENT INDICATOR	IN-SERVICES	√	√
72-00		LIGHT INFRA-RED	SELA	√	√
72-20		LIGHT INFRA-RED	SELA	√	√
742215-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
742215-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
744-082		DIGITAL FLOWMETER	FAURE HERMAN	√	√
744-082		DIGITAL FLOWMETER	FAURE HERMAN	√	√
744-082		DIGITAL FLOWMETER	FAUREHER	√	√
744-082-3		DIGITAL FLOWMETER	FAURE HERMAN	√	√
744-082-3		DIGITAL FLOWMETER	FAURE HERMAN	√	√
744-082-3		DIGITAL FLOWMETER	FAUREHER	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
744-098-1		DIGITAL FLOWMETER	FAURE HERMAN	√	√
744-098-1		DIGITAL FLOWMETER	IN-SERVICES	√	√
744-138		FLOW INDICATOR	FAURE HERMAN	√	√
744-138		FLOW INDICATOR	IN-SERVICES	√	√
748037-1		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
748037-1		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
748037-2		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
748037-2		AUXILIARY TANK INDICATOR	IN-SERVICES	√	√
748-459-1		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
748-459-1		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
748460-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
748460-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
748-511-1		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
748-511-1		MAIN TANK INDICATING PANEL	IN-SERVICES	√	√
748512-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
748512-1		AUXILIARY TANK INDICATING PANEL	IN-SERVICES	√	√
748-934-2		INDICATOR FUEL	IN-SERVICES	√	√
749-416		INDICATOR FUEL	IN-SERVICES	√	√
749841-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749841-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749851-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749851-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749853-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
749853-1-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
75-0286-1		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-11		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-13		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-15		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-17		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-3		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-5		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-7		ANNUNCIATOR PANEL	Grimes	√	√
75-0286-9		ANNUNCIATOR PANEL	Grimes	√	√
7582-175-00-12		NG DUAL INDICATORS	BRION - LEROUX	√	√
7582-175-00-12		NG DUAL INDICATORS (AMDT.E)	THALES	√	√
758355-2		INDICATOR FUEL GAUGE	IN-SERVICES	√	√
7613-551-91-13		T4 INDICATOR	THALES	√	√
7613-551-91-13		T4 INDICATOR	THALES	√	√
7613-554-91-11		T4 INDICATOR	THALES	√	√
7613-554-91-11		T4 INDICATOR	THALES	√	√
7613-555-91-10		T4 INDICATOR	THALES	√	√
7613-555-91-10		T4 INDICATOR	THALES	√	√
7613-557-91-10		T4 INDICATOR	THALES	√	√
7613-557-91-10		T4 INDICATOR	THALES	√	√
762283-1-0		INDICATOR FUEL GAUGE	IN-SERVICES	√	√
76450-00901-104		Indicator, Triple TACH	Ametek	√	√
76450-01005-101		Landing Gear Control	SIKORSKY	√	√
76450-01076-101	SEL-OC29F	TACH Indicator	Ametek	√	√
76450-01076-103		TRIPLE TACHOMETER	Ametek	√	√
76450-01076-103	SETL-OC329A	TRIPLE TACHOMETER	Ametek	√	√
76450-01076-106		Turbine Temperature Indicator	Ametek	√	√
76450-01076-106	SEL-OC19AM	Turbine Temperature Indicator	Ametek	√	√
76450-01076-107		Turbine Temperature Indicator	Ametek	√	√
76450-01076-107	SEL-OC19AP	Turbine Temperature Indicator	Ametek	√	√
76450-01076-110	SEL-OC29CF	Turbine Temperature Indicator	Ametek	√	√
76450-01078-104	203-023-003	HYDRAULIC PRESSURE IND.	GULL	√	√
76450-01078-106	303-006-003	DUAL TORQUE INDICATOR	GULL	√	√
76450-01078-112	203-022-008	OIL TEMP/PRESS IND.	GULL	√	√
76450-01078-112	203-022-008	OIL TEMP/PRESS IND.	GULL AIRBORNE	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
76550-01001-103	843772-103	Caution Panel	Teledyne	√	√
76550-01001-104	843766	Master Caution Panel	Teledyne	√	√
76550-01008-101		Dimmer Control	Grimes	√	√
76550-01008-101		Dimmer Control	Grimes	√	√
76550-01008-103		Dimmer Control	Grimes	√	√
76550-01008-103		Dimmer Control	Grimes	√	√
76550-01008-105		Dimmer Control	Grimes	√	√
76550-09006-105	51530-006A	DC Generator Control Unit	LSI	√	√
76550-09006-106	51530-006B	DC Generator Control Unit	LSI	√	√
76900-01804-103		AFCS Indicator Panel	SIKORSKY	√	√
76900-01880-106	2138-50000-106	Droop Compensator Amplifier	Norden Systems	√	√
7813-175-00-13		NR-N/TL 1 -N/TL2 TRIPLE INDICATOR	BRION - LEROUX	√	√
7813-175-00-13		NR-N/TL1-N/TL2 TRIPLE INDICATORS	THALES	√	√
7813-175-00-15		NR-N/TL 1 -N/TL2 TRIPLE INDICATOR	BRION - LEROUX	√	√
7813-175-00-15		NR-N/TL1-N/TL2 TRIPLE INDICATORS	THALES	√	√
7813-177-00-11		NR-2NTL TRIPLE INDICATOR	THALES	√	√
7813-177-00-12		NR-2NTL TRIPLE INDICATOR	THALES	√	√
7813-178-20-11		NR-2NTL TRIPLE INDICATOR	THALES	√	√
7813-178-20-12		NR-2NTL TRIPLE INDICATOR	THALES	√	√
791GA01Y00		ELECTRICAL MASTER BOX	IN-SERVICES	√	√
791GA01Y00		ELECTRICAL MASTER BOX	THALES	√	√
791GA01Y01		ELECTRICAL MASTER BOX	IN-SERVICES	√	√
791GA01Y01		ELECTRICAL MASTER BOX	THALES	√	√
792GA01Y03		ELECTRICAL MASTER BOX	IN-SERVICES	√	√
792GA01Y03		ELECTRICAL MASTER BOX	THALES	√	√
792GA01Y04		ELECTRICAL MASTER BOX	IN-SERVICES	√	√
792GA01Y04		ELECTRICAL MASTER BOX	THALES	√	√
794-997-1		FUEL GAUGE MODULE	FAURE HERMAN	√	√
794-997-1		FUEL GAUGE MODULE	IN-SERVICES	√	√
794GA01Y05		ELECTRICAL MASTER BOX	IN-SERVICES	√	√
794GA01Y05		ELECTRICAL MASTER BOX	THALES	√	√
796-541-2		REFUEL CONTROL PANEL	IN-SERVICES	√	√
796-541-2		REFUEL CONTROL PANEL	IN-SERVICES	√	√
796-542-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
796-542-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
796-542-2		REFUEL CONTROL PANEL	IN-SERVICES	√	√
796-542-2		REFUEL CONTROL PANEL	IN-SERVICES	√	√
798035-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
798035-1		REFUEL CONTROL PANEL	IN-SERVICES	√	√
7ZZ210M		MASTER ALARM AND INDICATOR PANEL	IN-SERVICES	√	√
80-0203-1		Caution Panel	Grimes	√	√
80-0203-11		Caution Panel	Grimes	√	√
80-0203-13		Caution Panel	Grimes	√	√
80-0203-3		Caution Panel	Grimes	√	√
80-0203-5		Caution Panel	Grimes	√	√
80-0203-7		Caution Panel	Grimes	√	√
80-0203-9		Caution Panel	Grimes	√	√
8107-101-00-12		10 BAR PRESSURE SENSOR	THALES	√	√
8107-105-00-10		10 BAR PRESSURE SENSOR	THALES	√	√
826A16-4		SHUT-OFF VALVE	IN-SERVICES	√	√
826A16-4		SHUT-OFF VALVE	IN-SERVICES	√	√
85240-010		Generator Control Unit	THALES	√	√
85240-010		Generator Control Unit	THALES	√	√
8DJ131AAG1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131AAJ1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131AAT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LAE1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LAF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LAN1		TACHOMETER INDICATOR	Ametek	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
8DJ131LAV1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LAW1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LAZ1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LBA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LBK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ131LBT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ150FAC1		DUAL TACHOMETER	Ametek	√	√
8DJ150FAC2		DUAL TACHOMETER	Ametek	√	√
8DJ150FAC3		DUAL TACHOMETER	Ametek	√	√
8DJ150FAC4		DUAL TACHOMETER	Ametek	√	√
8DJ150FAC5		DUAL TACHOMETER	Ametek	√	√
8DJ150LAC1		DUAL TACHOMETER IND.	Ametek	√	√
8DJ150LAD1		DUAL TACHOMETER IND.	Ametek	√	√
8DJ150LAE1	214-075-242-005	DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAA1		DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAC1	214-075-221-3	DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAD1	206-075-681-101	DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAE1	206-075-681-003	DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAF1	206-075-681-001	DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAG1		DUAL TACHOMETER IND.	Ametek	√	√
8DJ150WAH1	206-075-681-105	DUAL TACHOMETER IND.	Ametek	√	√
8DJ67FAB1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAC1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAE1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAF1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAH1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAK1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAT1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FAW1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FBC1	204-070-155-001	DUAL TACHOMETER	AMETEK	√	√
8DJ67FBE1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FBS1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FCA1	204-072-129-001	DUAL TACHOMETER	AMETEK	√	√
8DJ67FCC1		DUAL TACHOMETER	AMETEK	√	√
8DJ67FCM1	204-072-129-003	DUAL TACHOMETER	AMETEK	√	√
8DJ67FCW1	204-072-129-005	DUAL TACHOMETER	AMETEK	√	√
8DJ81AAA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81AAB1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81AAC1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81BAA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAC1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAE1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAF1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAH1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAH2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAK1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAL1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAM1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAM2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAN1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAN2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAS2		TACHOMETER INDICATOR	Ametek	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
8DJ81CAX2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAY2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CAZ2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CBA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CBB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CBK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CBX2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CCK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CCL2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CCM2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CDC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CDE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CDH2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81CDY2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81FAA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81FAA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAC1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAD1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAD2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAE1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAK1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAN2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAT1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAV2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAW1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAW2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAX2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAY2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LAZ2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBD2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBH2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBL2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBS2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LBX2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LCB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LCD2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LCF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LCK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWA1		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWH2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWM2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWN2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWR2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWS2		TACHOMETER INDICATOR	Ametek	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
8DJ81LWT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWV2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWY2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LWZ2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXD2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXG2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXH2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXK2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXL2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXM2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXN2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXP2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXV2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXW2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXY2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LXZ2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYA2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYP2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYT2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYV2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYW2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYX2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LYZ2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LZB2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LZC2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LZE2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81LZF2		TACHOMETER INDICATOR	Ametek	√	√
8DJ81WAG2		TACHOMETER INDICATOR	Ametek	√	√
8ZZ210M		FRONT PANEL	IN-SERVICES	√	√
9009-3003		TEMP/PRESS IND	Insco	√	√
9009-3004		TEMP/PRESS IND	Insco	√	√
9009-3009		TEMP/PRESS IND	Insco	√	√
9009-3010		TEMP/PRESS IND	Insco	√	√
9009-30113		TEMP/PRESS IND	Insco	√	√
9016-3002		Dual Loadmeter/Fuel Pressure Indicator	Insco	√	√
9016-3003		Dual Loadmeter/Fuel Pressure Indicator	Insco	√	√
921012-1	TFM-138	VHF FM Transceiver	Technisonic	√	√
921012-1	TFM-138B	VHF FM Transceiver	Technisonic	√	√
9599-607-12183		IND-021 HEIGHT INDICATOR (AHV8)	THOMSON CNI	√	√
9599-607-12201		IND-021 HEIGHT INDICATOR (AHV8)	THOMSON CNI	√	√
971083-1	TFM-403	VHF/UHF FM Transceiver	Technisonic	√	√
971083-3	TFM-403	VHF/UHF FM Transceiver	Technisonic	√	√
9813-25-05	212-070-160-001	DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-07	212-070-160-007	DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-12		DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-13		DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-15	412-075-008-101	DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-15	412-075-008-101	DUAL TORQUE IND	CLIFTON	√	√
9813-25-16		DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-17	212-070-160-101	DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-18		DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-19		DUAL TORQUE INDICATORS	CLIFTON	√	√
9813-25-21	412-075-008-111	DUAL TORQUE INDICATORS	CLIFTON	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
9813-25-21	412-075-008-111	DUAL TORQUE IND	CLIFTON	√	√
991095-1	TFM-550	VHF High/VHF Low/UHF FM Transceiver	Technisonic	√	√
991095-2	TFM-551	VHF High/VHF Low/UHF FM Transceiver	Technisonic	√	√
9ZZ210M		FRONT PANEL	IN-SERVICES	√	√
AE1410BA1		FAN	TECHNOFAN	√	√
AE1410BA1		FAN	TECHNOFAN	√	√
AE1708CA0		Fan	TECHNOFAN	√	√
AE1708CA0		Fan	TECHNOFAN	√	√
AE1712BA1		Fan	TECHNOFAN	√	√
AE1712BA1		Fan	TECHNOFAN	√	√
AN-701	AN-701	Actuator Position Indicator	Honeywell	√	√
ASH450-1		Static Inverter	Leland	√	√
ASH-584-1		Static Inverter	Leland	√	√
ASH-584-2		Static Inverter	Leland	√	√
ASH-584-3		Static Inverter	Leland	√	√
ASH-584-4		Static Inverter	Leland	√	√
ASH-584-5		Static Inverter	Leland	√	√
ASH-584-6		Static Inverter	Leland	√	√
B97R16-652		SHUT-OFF VALVE	IN-SERVICES	√	√
B97R16-652		SHUT-OFF VALVE	IN-SERVICES	√	√
B97R16-653		SHUT-OFF VALVE	IN-SERVICES	√	√
B97R16-653		SHUT-OFF VALVE	IN-SERVICES	√	√
BA1920EF		AUXILARY UNIT	TEAM	√	√
BA1920ES		AUXILARY UNIT	TEAM	√	√
BA1920GF		AUXILARY UNIT	TEAM	√	√
BA1920GS		AUXILARY UNIT	TEAM	√	√
BA1920HF		AUXILARY UNIT	TEAM	√	√
BA1920HS		AUXILARY UNIT	TEAM	√	√
BA1920LF		AUXILARY UNIT	TEAM	√	√
BA1920LS		AUXILARY UNIT	TEAM	√	√
BA1920NS01		AUXILARY UNIT	TEAM	√	√
BJ1977A		JUNCTION BOX	TEAM	√	√
BJ1977B		JUNCTION BOX	TEAM	√	√
BJ1977C		JUNCTION BOX	TEAM	√	√
BJ1977D		JUNCTION BOX	TEAM	√	√
C11BA0101		ELECTRIC PUMP	GOODRICH	√	√
C11BA0101		ELECTRIC PUMP	GOODRICH	√	√
C11BA0102		ELECTRIC PUMP	GOODRICH	√	√
C11BA0102		ELECTRIC PUMP	GOODRICH	√	√
C11BC0011		ELECTRIC PUMP	GOODRICH	√	√
C11BC0011		ELECTRIC PUMP	GOODRICH	√	√
C11BC0080		ELECTRIC PUMP	GOODRICH	√	√
C11BC0080		ELECTRIC PUMP	GOODRICH	√	√
C11BC0081		ELECTRIC PUMP	GOODRICH	√	√
C11BC0081		ELECTRIC PUMP	GOODRICH	√	√
C11BD0011		ELECTRIC PUMP	GOODRICH	√	√
C11BD0011		ELECTRIC PUMP	GOODRICH	√	√
C11BD0012		ELECTRIC PUMP	GOODRICH	√	√
C11BD0012		ELECTRIC PUMP	GOODRICH	√	√
C14158AA		ALTIMETER	THALES	√	√
C14158AA		ALTIMETER	THALES	√	√
C16240AA		T4 INDICATOR	THALES	√	√
C16287AA		TACHOMETER INDICATOR	THALES	√	√
C16287BA		TACHOMETER INDICATOR	THALES	√	√
C16287CA		TACHOMETER INDICATOR	THALES	√	√
C16287DA		TACHOMETER INDICATOR	THALES	√	√
C16299AA		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
C16299AA		NG SPEED AND LIMIT DEVIATION INDICATOR	THALES	√	√
CP1766ABC		AUDIO CONTROL PANEL	TEAM	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
CP1766G		AUDIO CONTROL PANEL	TEAM	√	√
CP1766GB01		AUDIO CONTROL PANEL	TEAM	√	√
CP1766GB02		AUDIO CONTROL PANEL	TEAM	√	√
CP1766H		AUDIO CONTROL PANEL	TEAM	√	√
CP1766J		AUDIO CONTROL PANEL	TEAM	√	√
CP1766K		AUDIO CONTROL PANEL	TEAM	√	√
CP1976A1		AUDIO CONTROL PANEL	TEAM	√	√
CP1976A2		AUDIO CONTROL PANEL	TEAM	√	√
CP1976AA01		AUDIO CONTROL PANEL	TEAM	√	√
CP1976AA02		AUDIO CONTROL PANEL	TEAM	√	√
CP1976AA03		AUDIO CONTROL PANEL	TEAM	√	√
CP1976B1		AUDIO CONTROL PANEL	TEAM	√	√
CP1976B2		AUDIO CONTROL PANEL	TEAM	√	√
CP1976C		AUDIO CONTROL PANEL	TEAM	√	√
CP1976DA02		AUDIO CONTROL PANEL	TEAM	√	√
CP1976EA01		AUDIO CONTROL PANEL	TEAM	√	√
CP1976EB01		AUDIO CONTROL PANEL	TEAM	√	√
CP1976FA01		AUDIO CONTROL PANEL	TEAM	√	√
CP1976FB01		AUDIO CONTROL PANEL	TEAM	√	√
CP1976GA01		AUDIO CONTROL PANEL	TEAM	√	√
CP2321A		AUDIO CONTROL PANEL	TEAM	√	√
CP2321B		AUDIO CONTROL PANEL	TEAM	√	√
CP2618A		AUDIO CONTROL PANEL	TEAM	√	√
CP2618AA02		AUDIO CONTROL PANEL	TEAM	√	√
CP2618AA03		AUDIO CONTROL PANEL	TEAM	√	√
CP2618AA05		AUDIO CONTROL PANEL	TEAM	√	√
CP2618BA03		AUDIO CONTROL PANEL	TEAM	√	√
CP2618CA03		AUDIO CONTROL PANEL	TEAM	√	√
CP2618DA01		AUDIO CONTROL PANEL	TEAM	√	√
CP2618DB01		AUDIO CONTROL PANEL	TEAM	√	√
CP2618DB03		AUDIO CONTROL PANEL	TEAM	√	√
DL401-14	206-075-681-115	DUAL TACHOMETER	VDO	√	√
DL401-15	206-075-681-117	DUAL TACHOMETER	VDO	√	√
DL401-18	206-075-681-123	DUAL TACHOMETER	VDO	√	√
DL404-109	412-075-010-111	TRIPLE TACHOMETER	VDO	√	√
DL412-39	105-90948	TACHOMETER	VDO	√	√
DL412-53	105-957051	TACHOMETER	VDO	√	√
DL412-55	212-075-037-105	TACHOMETER	VDO	√	√
DL412-57	206-075-682-105	TACHOMETER	VDO	√	√
DL412-60	212-075-037-107	TACHOMETER	VDO	√	√
DL412-61	206-075-682-107	TACHOMETER	VDO	√	√
DL412-63	206-075-682-109	TACHOMETER	VDO	√	√
DL412-64	212-075-037-109	TACHOMETER	VDO	√	√
DL412-65	212-075-037-113	TACHOMETER	VDO	√	√
DT409-11	412-375-007-113	TRIPLE TORQUE IND	VDO	√	√
DT409-11	412-375-007-113	TRIPLE TORQUE INDICATOR	VDO	√	√
DT409-6	412-375-007-105	TRIPLE TORQUE IND	VDO	√	√
DT409-8	412-375-007-107	TRIPLE TORQUE IND	VDO	√	√
EE0050-2		5 VDC POWER SUPPLY	SERMAT	√	√
EE0050-2		5 VDC POWER SUPPLY	SERMAT	√	√
EVT422G		FAN	TECHNOFAN	√	√
EVT422G		FAN	TECHNOFAN	√	√
FR2212		SMOKE DETECTOR	L'HOTELLIER	√	√
FR2212		SMOKE DETECTOR	L'HOTELLIER	√	√
G6250-1		CONTROLLABLE SEARCHLIGHT	Grimes	√	√
G6250-4		CONTROLLABLE SEARCHLIGHT	Grimes	√	√
G6250-5		CONTROLLABLE SEARCHLIGHT	Grimes	√	√
G6250-6		CONTROLLABLE SEARCHLIGHT	Grimes	√	√
IDA0302061		TORQUE INDICATOR	LABEM	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
IDA0302061		TORQUE INDICATOR	LABEM	√	√
LA11A2119-1		Linear Actuator	ITT	√	√
M7950-21		Chime Generator	Baker	√	√
M7950-26		Chime Generator	Baker	√	√
MI585222-1	RT-3002	Weather Radar	Honeywell	√	√
MI585277	DI-2007	Weather Radar Indicator	Honeywell	√	√
MI585277-1	DI-2007	Weather Radar Indicator	Honeywell	√	√
MI585277-4	DI-2007	Weather Radar Indicator	Honeywell	√	√
MI585277-5	DI-2007	Weather Radar Indicator	Honeywell	√	√
MK-12D	MK-12D	NAV/COMM	Narco	√	√
MS5750V01		Blower Motor	Artus	√	√
MS-700	MS-700	Flight Director Mode Selector	Honeywell	√	√
MS-702	MS-702	Flight Director Mode Selector	Honeywell	√	√
N2000092		FLIGHT REFUEL BOOM CONTROL BOX	SN-IRGE	√	√
N2000092		FLIGHT REFUEL BOOM CONTROL BOX	SN-IRGE	√	√
NPX-138N	NPX-138N	VHF FM Transceiver	NAT	√	√
P94B12-203		Boost Pump	INTERTECHNIQUE	√	√
P94B12-208		Boost Pump	INTERTECHNIQUE	√	√
P94B12-209		Boost Pump	INTERTECHNIQUE	√	√
P94C16-602		FUEL PUMP	INTERTECHNIQUE	√	√
P94C16-608		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P94C16-608		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P99C16-609		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P99C16-609		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P99C16-610		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P99C16-610		FUEL ELECTRIC PUMP	IN-SERVICES	√	√
P99C20-601		TRANSFER PUMP	IN-SERVICES	√	√
P99C20-601		TRANSFER PUMP	IN-SERVICES	√	√
PC12VR		STATIC INVERTER	FLITE TRO	√	√
PC-12VR	PC-12VR	DC-DC Converter	AVIONIC INSTRUMENTS	√	√
PC-12VR		STATIC INVERTER	FLITE-TRONICS	√	√
PC-12VR		DC-DC Converter	MARATHONNORCO	√	√
PC-15H()	PC-15H()	STATIC INVERTER	FLITE-TRONICS	√	√
PC-16		Inverter	AVIONIC INSTRUMENTS	√	√
PC-16		Inverter	MARATHONNORCO	√	√
PC-250		Static Inverter	AVIONIC INSTRUMENTS	√	√
PC-250		Static Inverter	MARATHONNORCO	√	√
PC-350		Static Inverter	AVIONIC INSTRUMENTS	√	√
PC-350		Static Inverter	AVIONIC INSTRUMENTS	√	√
PC-700	PC-700	Autopilot Controller	Honeywell	√	√
PC-702	PC-702	Autopilot Controller	Honeywell	√	√
PEO-600-3		EXTENSIBLE SEARCH-LIGHT	IN-SERVICES	√	√
PEO-600-A		EXTENSIBLE SEARCH-LIGHT	IN-SERVICES	√	√
PMC245000		THRESHOLD DETECTOR	SPEG	√	√
PMC245000		THRESHOLD DETECTOR	SPEG	√	√
PMC254000		THRESHOLD DETECTOR	SPEG	√	√
PMC254000		THRESHOLD DETECTOR	SPEG	√	√
PMD242000		THRESHOLD DETECTOR	SPEG	√	√
PMD242000		THRESHOLD DETECTOR	SPEG	√	√
R3379-100		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-100		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-200		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-200		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-210		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-210		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-220		AC GENERATOR CONTROL UNIT	THALES	√	√
R3379-220		AC GENERATOR CONTROL UNIT	THALES	√	√
RC-30-VIL	212-070-239-001	VSI INDICATOR	AEROSONIC	√	√
RCA15AK		Directional Gyro	RC Allen	√	√



Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
RCA15BK		Directional Gyro	RC Allen	√	√
RCA15CM		Directional Gyro	RC Allen	√	√
RCA26BK		ATTITUDE GYRO	RC Allen	√	√
RCA40-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA40A-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA40AB-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA40B-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA41-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA41A-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA41AB-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA41B-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA42-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA42A-()		TACHOMETER INDICATOR	RC Allen	√	√
RCA82A-1	102-0027-01	TURN COORDINATOR	R.C.ALLEN	√	√
RCA82A-11	C661003-0506	TURN COORDINATOR	R.C.ALLEN	√	√
RCA82A-11	C661003-0506	TURN COORDINATOR	R.C.ALLEN	√	√
RCA82A-2	102-0027-02	TURN COORDINATOR	R.C.ALLEN	√	√
RCA82A-3		TURN COORDINATOR	R.C.ALLEN	√	√
RCA82A-4	102-0027-05	TURN COORDINATOR	R.C.ALLEN	√	√
RCA83A-1	100-0030-01	TURN COORDINATOR	R.C.ALLEN	√	√
RCA83A-11	100-0030-05	TURN COORDINATOR	R.C.ALLEN	√	√
RCA83A-2	100-0030-02	TURN COORDINATOR	R.C.ALLEN	√	√
RI-106	RI-106	Remote Instrument Controller	Honeywell	√	√
RI-206	RI-206	Remote Instrument Controller	Honeywell	√	√
RI-406	RI-406	Remote Instrument Controller	Honeywell	√	√
S15KA		Airspeed Indicator	Aerosonic	√	√
S15KAV		Airspeed Indicator	Aerosonic	√	√
S15KAW		Airspeed Indicator	Aerosonic	√	√
S15KILR1	212-070-122-001	Airspeed Indicator	Aerosonic	√	√
S15KILR11	212-070-122-011	Airspeed Indicator	Aerosonic	√	√
S15KILR13	212-070-122-013	Airspeed Indicator	Aerosonic	√	√
S15KILR15	212-070-122-015	Airspeed Indicator	Aerosonic	√	√
S15KILR17	212-070-122-017	Airspeed Indicator	Aerosonic	√	√
S15KILR19	212-070-122-019	Airspeed Indicator	Aerosonic	√	√
S15KILR20	212-070-122-1009	Airspeed Indicator	Aerosonic	√	√
S15KILR21	212-070-122-101	Airspeed Indicator	Aerosonic	√	√
S15KILR9	212-070-122-009	Airspeed Indicator	Aerosonic	√	√
S1820502-01	KANNAD 406 AP	KANNAD 406 AP ELT	KANNAD	√	√
S1820502-02	KANNAD 406 AP	KANNAD 406 AP ELT	KANNAD	√	√
S1821502-01	KANNAD 406 AF	KANNAD 406 AF ELT	KANNAD	√	√
S1821502-02	KANNAD 406 AF	KANNAD 406 AF ELT	KANNAD	√	√
S1821502-06	KANNAD 406 AF (6D)	KANNAD 406 AF (6D) ELT	KANNAD	√	√
S1822502-01	KANNAD 406 AF-H	KANNAD 406 AF-H ELT	KANNAD	√	√
S1822502-02	KANNAD 406 AF-H	KANNAD 406 AF-H ELT	KANNAD	√	√
S1823502-01	KANNAD 406 AS	KANNAD 406 AS ELT	KANNAD	√	√
S1823502-02	KANNAD 406 AS	KANNAD 406 AS ELT	KANNAD	√	√
S1823502-03	KANNAD 406 AS-TNC	KANNAD 406 AS-TNC ELT	KANNAD	√	√
S1824502-01	KANNAD 121 AF	KANNAD 121 AF ELT	KANNAD	√	√
S1824502-02	KANNAD 121 AF	KANNAD 121 AF ELT	KANNAD	√	√
S1826502-02	KANNAD 121 AF-H	KANNAD 121 AF-H ELT	KANNAD	√	√
S6190-60045-1		CHANNEL MONITOR	SIKORSKY	√	√
S6190-60045-2		CHANNEL MONITOR	SIKORSKY	√	√
S6190-60045-3		CHANNEL MONITOR	SIKORSKY	√	√
S6190-60045-5		CHANNEL MONITOR	SIKORSKY	√	√
S6190-60060-041		AFCS PANEL	SIKORSKY	√	√
S6190-60060-1		AFCS PANEL	SIKORSKY	√	√
S6190-60060-2		AFCS PANEL	SIKORSKY	√	√
S6190-60060-3		AFCS PANEL	SIKORSKY	√	√
S6190-60060-4		AFCS PANEL	SIKORSKY	√	√

Part Number	Model Number	Description	Manufacturer	Manual ( v )	Test Equipment ( v )
S6192-61090-1		LAG AMPLIFIER	SIKORSKY	√	√
S6192-61090-2		LAG AMPLIFIER	SIKORSKY	√	√
SEL-019AU-1		TOT Indicator	Ametek	√	√
SEL-019AU-2		TOT Indicator	Ametek	√	√
SEL-019DR		TOT Indicator	Ametek	√	√
SEL-019DS		TOT Indicator	Ametek	√	√
SEL-019DS-1		TOT Indicator	Ametek	√	√
SEL-019DT		TOT Indicator	Ametek	√	√
SEL-OC19AM	76450-01076-106	Turbine Temperature Indicator	Ametek	√	√
SEL-OC19AP	76450-01076-107	Turbine Temperature Indicator	Ametek	√	√
SEL-OC19BF	350A82128302	T4 INDICATOR	Ametek	√	√
SEL-OC19BF-03	350A82128303	T4 INDICATOR	Ametek	√	√
SEL-OC19BF-SD	350A821283SD	T4 INDICATOR	Ametek	√	√
SEL-OC19EH		T4 INDICATOR	Ametek	√	√
SEL-OC19EJ	212-075-067-109	ITT INDICATOR	Ametek	√	√
SEL-OC29F	76450-01076-101	TACH Indicator	Ametek	√	√
SEL-OC29CF	76450-01076-110	Turbine Temperature Indicator	Ametek	√	√
SETL-OC329A	76450-01076-103	TRIPLE TACHOMETER	Ametek	√	√
TSG 420-101		Static Inverter	THALES	√	√
TSG 420-101		Static Inverter	THALES	√	√
TSG420-103		STATIC INVERTER	THALES	√	√
VT476-3	412-375-001-105	DUAL FUEL QTY	VDO	√	√
VT476-2	412-375-001-105	DUAL FUEL QTY	VDO	√	√