

Part Number	Description	Ovhl	Cert	Repair
01-0770028-05	Box, Power Supply		X	X
01-0770905-01	LED STROBE		X	
010-01518-00	Garmin Aera 660 Portable GPS			
011-00280-10	GNS 430		X	
011-00490-00	Garmin GTX 327, Transponder		X	X
011-01060-40	GNS430W VHF/GPS/VLOC		X	X
011-02718-00	Garmin VHF Radio, GTR225		X	X
164850900	Fuel Control Unit		X	
174078030	Start Drain Valve		X	
174126090	DRAIN VALVE ASSY PRE ACR (AE 89735)		X	
024797-000	Nickel Cadmium Battery		X	X
028-025-001	TANK UNIT-FUEL QUANTITY		X	X
292005220	TURBOMECA ARRIEL 1D1		X	
292907680	ARRIEL 1D1 FREE WHEEL ASSY		X	
031216-1	TFM-530, GREEN display, 28 V lighting & VHF Guard		X	X
319157040	Pipe, Delivering			
064-1019-01	KY 196E		X	X
064-1019-05	KY 196 VHF COMM		X	X
064-1019-10	KY 196 VHF COMM		X	X
064-1019-20	KY196 VHF COMM		X	X
064-1052-60	KY 96A VHF COMM		X	X
064-1054-30	KY 196A VHF COMM		X	X
066-1062-00	KT-76A Transponder		X	X
066-1062-10	KT-76A Transponder		X	X
066-1067-00	KN 53 NAV/GS RECEIVER		X	X
066-3044-00	KNI-416 RADALT IND.	X	X	X
066-3044-02	KNI 416	X	X	X
066-3044-03	KNI 416	X	X	X
066-3044-04	KNI 416	X	X	X
071-1242-01	KA51B Slaving Acessory		X	X
10035-11326	Altimeter	X	X	X
10035-11424	Altimeter	X	X	X
101-00185	PITOT STATIC TEST SET		X	
101-00930	Barfield TT1200A Turbine Temperature Test Set		X	
101720-11810	Indicator/Bar Altimeter	X	X	X
101735-011002	Altimeter	X	X	X
101735-11728	Altimeter	X	X	X
102-2100	IND201 Radalt Indicator		X	
102-2100-01	IND201 Radalt Indicator		X	
102200-11850	Altimeter	X	X	X
1025-976-1	DAMPER ASSEMBLY-VISCOUS			
103-0022-01	Directional Gyro	X	X	X
10447N01T00	TOT INDICATOR	X	X	X
11-84961	Cooler, Oil		X	
1105P83	SWITCH,PRESSURE		X	X
111303-4	Attitude Director Indicator	X	X	X
11HSX-295	Relay			
122GA01AAY04	AC GROUND POWER PROTECTION UNIT		X	X
122GA01Y03	AC GROUND POWER PROTECTION UNIT		X	X
122GA01Y04	GRND PWR Protection Unit		X	X
124.039-3	Dual Ampere Indicator	X	X	X
124.043	Dual Temp. and Press. Indicator	X	X	X
124.044	FUEL PRESS IND	X	X	X
124.067-2	ITT INDICATOR	X	X	X
124.1012-7	TEMP/PRESS IND	X	X	X
124.1013	TEMP/PRESS IND	X	X	X
124.1013-1	TEMP/PRESS IND	X	X	X
124.115-3	TEMP/PRESS IND	X	X	X
124.444-10	TOT INDICATOR	X	X	X
124.444-12	TOT INDICATOR	X	X	X
124.480-3	ITT INDICATOR	X	X	X

1268-000	SWITCH,PRESSURE		X	
134TS05H9V3AAB	CENTRAL WARNING PANEL		X	X
142GA01Y04	Alternator Protection		X	X
15020-6501	Altimeter	X	X	X
151CH1	Ni-Cad Battery		X	X
1606-1	NICKEL-CADMIUM BATTERY		X	X
184ZP01Y31	Deicing Panel		X	X
1U262-001-39	Directional Gyro	X	X	X
1ZZ205M	UNIT, POWER SUPPLY		X	X
20321-001	Master Caution Panel		X	X
206-070-265-007	DUAL TACHOMETER	X	X	X
206-070-265-7	Dual Tach Gauge	X	X	X
206-075-185-001	Torquemeter	X	X	X
206-075-185-103	Torque Indicator	X	X	X
206-075-186-003	Dual Loadmeter/Fuel Pressure Indicator	X	X	X
206-075-187-001	Temp/Press Indicator	X	X	X
206-075-188-001	TEMP/PRESS IND	X	X	X
206-075-677-101	TEMP/PRESS IND	X	X	X
206-075-677-103	TEMP/PRESS IND	X		X
206-075-678-105	TEMP/PRESS IND	X	X	X
206-075-681-003	DUAL TACHOMETER IND.	X	X	X
206-375-005-101	TOT Indicator	X	X	X
206-75-739-105	TOQUE INDICATOR	X	X	X
209-070-262-101	TEMP/PRESS IND	X	X	X
209-070-263-001	Indicator, Dual Voltmeter	X	X	X
209-075-325-045	Annunciator Panel	X	X	X
209-075-325-45	Annunciator Panel	X	X	X
209-075-326-001	RPM Limit Detector	X	X	X
209-075-326-101	RPM Limit Detector	X	X	X
212-070-108-005	TACHOMETER	X	X	X
212-070-108-007	Indicator, Triple Tach	X	X	X
212-070-116-009	DUAL TEMPERATURE AND PRESSURE INDICATOR	X	X	X
212-070-160-007	DUAL TORQUE IND	X	X	X
212-070-160-101	DUAL TORQUE IND	X	X	X
212-070-160-121FM	Dual Torque Indicator	X	X	X
212-070-160-123FM	Dual Torque Indicator	X	X	X
212-070-160-129FM	Dual Torque Indicator	X	X	X
212-070-160-131FM	Dual Torque Indicator	X	X	X
212-070-160-17	Dual Torque	X	X	X
212-070-238-007	Altimeter	X	X	X
212-070-239-001	Indicator Vertical Speed	X	X	X
212-070-242-003	Electric Tachometer	X	X	X
212-070-242-3	Electric Tachometer	X	X	X
212-075-036-101	DUAL TEMPERATURE AND PRESSURE INDICATOR	X	X	X
212-075-037-113	Gas Producer Tachometer	X	X	X
212-075-067-105	Inter Turbine Temperature Indicator	X	X	X
212-075-067-107	ITT INDICATOR	X	X	X
212-075-067-109	ITT IND.	X	X	X
212-075-962-001	Power Supply		X	X
214-075-221-003	Tachometer Indicator	X	X	X
214-075-221-3	DUAL TACHOMETER IND.	X	X	X
214-175-257-109	Fuel Quantity Indicator		X	
23-501-017	Attitude Gyro	X	X	X
2306-557-00-10	FUEL GAUGE INDICATORS	X	X	X
2309-155-00-10	Voltmeter	X	X	X
2309-362-00-10	Ammeter Indicator	X	X	X
24-month check	24-month check			
2579-116-1	DC VOLTMETER	X	X	X
2594484	FLUX VALVE		X	
2816	REDUCING GEAR ACTUATOR	X	X	X
2LA003849-00	High Intensity Strobe Light		X	X
2ZL122M	MASTER ALARM AND INDICATOR PANEL		X	X

Nov-00	Emergency Locator Transmitter		X	
3057-3-136-5	TORQUEMETER INDICATOR	X	X	X
3057-3-136-6	TORQUEMETER INDICATOR	X	X	X
31908-001	Battery		X	
33776-44261-050	COMPASS CONTROL PANEL		X	X
34528H022	UNIT POWER SUPPLY		X	X
34528H023	UNIT, POWER SUPPLY		X	X
3491410-12-070	SEAT BELT ASSEMBLY		X	
3491411-12-070	HARNESS		X	
350A08-5506-0401	Lower Vertical Stabilizer		X	
350A08-5506-0501	Lower Vertical Stabilizer		X	X
350A08-5506-0701	Upper Vertical Stabilizer		X	X
350A08-5506-1101	Upper Vertical Stabilizer		X	X
350A08-5506-1401	Lower Vertical Stabilizer		X	X
350A13-0020-0301	Horizontal Stabilizer		X	X
350A14-0021-0901	VERTICAL FIN, LOWER		X	X
350A25-0000-0107	AS350 Canopy		X	X
350A25-1532-01	Lock Rear		X	
350A27-1182-20	FORK END		X	
350A27-1185-00	PEDAL, DIRECTIONAL CONTROL		X	
350A27-1185-01	PEDAL, DIRECTIONAL CONTROL		X	
350A27-1370-20	BUSH, STOP		X	
350A27-1453-00	LEVER, FRONT		X	
350A27-1594-03	STAND,CYCLIC LEVER,CO-PILOT		X	
350A27-1598-00	Fork End		X	
350A27-1910-0401	ROD ACTUATING, TGB		X	
350A27-1950-07	Rod, Lateral RH		X	
350A27-1970-00	Rod Assy		X	
350A31-0033-03	MR Anti Vibe	X	X	X
350A31-1771-21	PIN, MR BLADE		X	
350A31-1850-02	MAIN ROTOR SLEEVE		X	
350A31-1850-03	MAIN ROTOR SLEEVE		X	
350A31-1852-20	Fitting		X	
350A31-1854-21	SCREW, SPHERICAL STOP		X	
350A31-1875-22	Shim		X	
350A31-1888-00	BONDING BRAID		X	
350A31-1907-03	STARFLEX		X	
350A32-0110-00	EPICYCLIC REDUCTION GEAR ASSY		X	
350A32-0300-04	BEVEL REDUCTION GEARBOX		X	
350A33-0008-08	TAIL ROTOR TRANSMISSION UNIT		X	
350A33-0200-05	T/R GEARBOX		X	
350A33-2119-05	T/R HUB BODY		X	
350A33-2145-00	Control Rod T/R Pitch		X	
350A34-0150-02	FWD SECTION SHAFT		X	
350A34-0150-04	FRONT SHAFT ASSY		X	
350A34-1023-21	FLANGE SPLINED		X	
350A35-0131-01	DRIVE ASSY, HYDRAULIC PUMP		X	
350A35-1059-01	DISK, ASSEMBLY COUPLING		X	
350A35-1080-20	FLANGE		X	
350A35-1090-00	CASING, MGB/ENGINE COUPLING		X	
350A35-1091-20	Driving Pulley		X	
350A35-1100-21	SHAFT, COUPLING, INPUT		X	
350A35-1102-05	HOUSING,COUPLING (ARRIEL)		X	
350A35-1103-02	JUNCTION HOUSING (LTS)		X	X
350A35-1105-00	RING, GIMBAL JOINT		X	
350A37-0004-02	MAIN ROTOR MAST		X	X
350A37-1004-11	SWASHPLATE ASSEMBLY		X	
350A37-1026-00	Tapered Ring		X	
350A37-1248-21	Flange		X	
350A38-1040-20	CROSSBEAM, BARE		X	X
350A41-1076-20	PAD/LEAF		X	
350A53-1048-22	OIL COOLER MOUNT		X	

350A53-1048-23	OIL COOLER MOUNT		X	
350A53-1081-0230	OIL TANK		X	
350A54-1005-02	Exhaust Duct		X	
350A54-1085-21	BRACKET		X	
350A57-1003-20	END-FITTING		X	
350A61-1393-00	PCB Board for Cluster Indicators	X	X	X
350A75-1114-00	UNION,SPECIAL		X	
350A75-2050-06	ABSORBER,SHOCK,L/G	X	X	X
350A75-2095-20	PIN, PISTON		X	
355A12-0040-08	TAIL ROTOR BLADE		X	
355A13-0520-0201	Horizontal Stabilizer		X	X
355A13-0520-0303	Horizontal Stabilizer		X	
355A13-0520-0701	Stabilizer, Horizontal		X	X
355A41-2000-02	Cross Beam FWD ASSY, Low Gear	X	X	X
355A41-2001-03	Cross Beam AFT ASSY	X	X	
355A61-5270-00	Printed C/B 14A		X	
355A75-1330-03	Hydraulic Tank LH		X	
3567758-6503	Transmitter Torque		X	X
3571320-0010	Synchro Indicator	X	X	X
367-111-003	RDAU			
373GC01Y001	DIRECT CURRENT GENERATING UNIT		X	X
374GC01Y	DIRECT CURRENT GENERATING UNIT		X	X
37501-CAM	Altimeter	X	X	X
381065-009	Fuel Probe		X	
38399-490	Airspeed Indicator	X	X	X
38399-490-02	Airspeed Indicator	X	X	X
384178-091	Fuel QTY Switch	X	X	X
393004-01884	FUEL QTY IND.	X	X	X
393008-036	FUEL QTY INDICATOR	X	X	X
393008-046	Indicator, Fuel QTY	X	X	X
393008-047	Fuel QTY Indicator	X	X	X
3932241-9003	TOTALIZING DUAL FUEL QUANTITY IND.	X	X	X
3943333-9001	Triple Tachometer Indicator	X	X	X
3943333-9002	Triple Tachometer Indicator	X	X	X
39563-001	Battery		X	
3A43.32.20F.28.4.EE	Altimeter STBY		X	
40208-1	Nickel Cadium Battery	X	X	X
403GC01Y01	PCB, Battery Protection		X	X
409CH2	AIRCRAFT BATTERY		X	X
41105C5A4E3	Dual Tachometer	X	X	X
412-075-008-111	DUAL TORQUE IND	X	X	X
412-075-008-113	DUAL TORQUE INDICATOR	X	X	X
4168	CHARGER/ANALYZER BC8000		X	
4168762	Search Light	X	X	X
418-00404-000	MOVEMENT DETECTOR UNIT		X	X
418-00453-102	AFCS CONTROLLER		X	X
418-00456-304	S.F.I.M AP 155 CONTROL UNIT		X	X
418-00625-114	ROLL CONTROL ACTUATOR		X	
418-00625-124	ACTUATOR		X	
418-00625-134	ACTUATOR ASSY, YAW		X	
41830	ROTOR RPM INDICATOR	X	X	X
419-00321-350	UNIT, CONTROL, CDV85		X	X
4202104	Search Light	X	X	X
4217228	Search Light	X	X	X
4226271	Search Light	X	X	X
430-6040-203	SL40 VHF COMM		X	X
4300-311	Attitude Indicator	X	X	X
4307405	SEARCHLIGHT	X	X	X
4308-3018	Torquemeter	X	X	X
4308-3058	Torquemeter	X	X	X
4360404	Search Light	X	X	X
4361646	Search Light	X	X	X

44090-6941-01	Airspeed Indicator		X	X
449	Power Supply		X	X
45-0182-7	SEARCHLIGHT-CONTROLLABLE, AIRCRAFT	X	X	X
453-5001-316	C406-2HM ELT		X	
453-5061	ELT		X	
453-6603	ELT ME406		X	
4619-777-00-10	LOAD IND.	X	X	X
4679078A	IND201 Radalt Indicator		X	X
47750	MOTOR,ELECTRICAL, 400 W		X	
483GC01AY122	Master Electrical Box		X	X
493GC01AY132	Master Electrical Box		X	X
493GC01Y132	LH ELECTRICAL MASTER BOX		X	X
5007-155-00-20	NR SPEED SENSOR POST 076120		X	
5007-155-00-20AB	NR SENSOR AND LOOM		X	
501-1228-04	Emergency Power Supply		X	X
501-1712-01	Emergency Power Supply PS-855		X	X
501-1849-01	ATTITUDE INDICATOR	X	X	X
5018-105-00-10	PRESSURE CONDITIONER UNIT	X	X	X
5018-106-00-10	FUEL PRESSURE CONDITIONER UNIT	X	X	X
5032-3018	TOT IND.	X	X	X
5035P2-P42	ENCODING ALTIMETER	X	X	X
5035PB-1P166	Altimeter		X	X
503BA01Y03	MASTER WARNING UNIT		X	X
504-0032-902	Attitude Gyro	X	X	X
504-0033-909	Attitude Gyro	X	X	X
504-0110-905	Attitude Horizon	X	X	X
504084-401-7497	SEAT BELT ASSY.		X	
505-0002-904	200DC Directional Gyro	X	X	X
505-0010-901	Directional Gyro	X	X	X
505-0031-904	Directional Gyro	X	X	X
51509-002	DC Generator Control Unit	X	X	X
51509-002R	DC Generator Control Unit		X	X
51530-006	DC Generator Control Unit	X	X	X
51539-002N	DC Generator Control Unit	X	X	X
53-51-6-1	Torque Transmitter	X	X	X
5306-155-00-10	OIL PRESSURE INDICATOR	X	X	X
5306-255-00-11	ENGINE OIL TEMPERATURE INDICATOR	X	X	X
5306-267-00-10	ENGINE OIL TEMPERATURE INDICATOR		X	
5617-352-91-11	DUAL ENGINE OIL PRESS.TEMP.IND.	X	X	X
5617-352-91-12	DUAL ENGINE OIL PRESS.TEMP.IND.	X	X	X
5617-353-99-10	DUAL ENGINE OIL PRESS.TEMP.IND.	X	X	X
5617-355-91-11	DUAL ENGINE OIL PRESS.TEMP.IND.	X	X	X
5617-363-80-10	MOTOR OIL PRESS TEMP IND.	X	X	X
5617-367-80-10	MOTOR OIL PRESS TEMP IND.	X	X	X
5633-619-00-12	NG INDICATOR	X	X	X
5633-707-80-12	NG SPEED & LIMIT DEVIATION IND.	X	X	X
5633-711-80-10	NG SPEED AND LIMIT DEVIATION INDICATOR	X	X	X
5633-716-80-10	NG SPEED AND LIMIT DEVIATION IND.	X	X	X
5633-719-20-00	NG SPEED AND LIMIT DEVIATION INDICATOR		X	X
5637-553-00-10	T4 INDICATOR	X	X	X
5637-560-00-10	T4 INDICATOR	X	X	X
5677-752-00-10	TORQUEMETER INDICATOR	X	X	X
5677-752-00-11	TORQUEMETER INDICATOR	X	X	X
5677-753-20-10	TORQUEMETER INDICATOR	X	X	X
5677-753-20-11	TORQUEMETER INDICATOR	X	X	X
5677-753-20-12	TORQUEMETER INDICATOR	X	X	X
1958-08-01	Inverter		X	X
5813-700-00-10	NTL-NR INDICATOR (FOR L1)	X	X	X
5876-703-00-10	NR INDICATOR	X	X	X
5876-704-20-10	NR INDICATOR	X	X	X
5876-704-20-11	NR INDICATOR	X	X	X
5934	Altimeter	X	X	X

Jan-34	Altimeter	X	X	X
Mar-34	Altimeter	X		X
5934A	Altimeter	X	X	X
5934D-1	Altimeter	X		X
5934D-3	ALTIMETER	X	X	X
5934M-1	Altimeter	X	X	X
5934P-1	Altimeter	X	X	X
5934P-1L	ALTIMETER	X	X	X
5934P-3	Altimeter	X	X	X
5934P-3A.83	Altimeter	X	X	X
5934P-A56	Altimeter	X	X	X
5934PA-1	Altimeter	X	X	X
5934PAD-3	ALTIMETER	X	X	X
5934PAD-3B	Altimeter	X	X	X
5934PAM-1	Altimeter	X	X	X
5934PD-1	ALTIMETER	X	X	X
5934PD-3	Altimeter	X	X	X
5934PM-1	Altimeter	X	X	X
5934PM-3	Altimeter	X	X	X
60-3274-5	Strobe Light Power Supply		X	X
610AL01Y	POWER SUPPLY BOX		X	X
61474-103-1	TACHOMETER INDICATOR	X	X	X
61474-103-2	TACHOMETER INDICATOR	X	X	X
61474-103-3	TACHOMETER INDICATOR	X	X	X
61474-103-4	TACHOMETER INDICATOR	X	X	X
61474-108-1	TACHOMETER INDICATOR	X	X	X
61474-108-2	TACHOMETER INDICATOR	X	X	X
61474-112-1	TACHOMETER INDICATOR	X	X	X
61474-112-2	TACHOMETER INDICATOR	X	X	X
61474-114-1	TACHOMETER INDICATOR	X	X	X
61474-130-1	TACHOMETER INDICATOR	X	X	X
61474-130-2	TACHOMETER INDICATOR	X	X	X
61474-131-2	TACHOMETER INDICATOR	X	X	X
61474-132-1	TACHOMETER INDICATOR	X	X	X
61474-133-1	TACHOMETER INDICATOR	X	X	X
61474-134-1	TACHOMETER INDICATOR	X	X	X
61474-135-1	TACHOMETER INDICATOR	X	X	X
61476-402-1	NR-NTL DOUBLE INDICATOR	X	X	X
61476-403-1	NR-NTL DOUBLE INDICATOR	X	X	X
63540-045-2	RMI / VOR / ADF INDICATOR		X	X
64140-953-1	Altimeter	X	X	X
64140-971-1	ALTIMETER	X	X	X
64251-903-1	Transmitter	X	X	X
64251-903-2	TRANSMITTER,TORQUEMETER	X	X	X
64279-004-1	PRESSURE TRANSDUCER	X	X	X
64279-200-2	PRESSURE TRANSDUCER	X	X	X
64279-508-2	TRANSMITTER, OIL PRESUURE		X	X
6430120-1	TC120 120W DC/DC Converter		X	X
64550-005-1	Tachometer Generator			X
64711-100-1	TRANSMITTER, ROTOR, RPM		X	
64751-003-2	Fuel Qty Transmitter	X	X	X
64751-003-3	Fuel Quantity Probe	X	X	X
64751-100-1	Fuel Level Transmitter		X	X
64751-101-1	Fuel Level Transmitter	X	X	X
64757-100-2	GAUGE TRANSMITTER	X	X	X
64757-101-2	GAUGE TRANSMITTER	X	X	X
64809-505-1	PRESSURE INDICATOR		X	X
64809-506-1	PRESSURE INDICATOR		X	X
64809-507-1	PRESSURE INDICATOR		X	
64809-508-1	PRESSURE INDICATOR		X	X
64809-509-1	PRESSURE INDICATOR		X	X
64809-511-1	PRESSURE INDICATOR		X	

64809-515-1	PRESSURE INDICATOR		X	
64809-522-1	PRESSURE INDICATOR		X	X
64809-523-1	PRESSURE INDICATOR		X	X
64809-524-1	PRESSURE INDICATOR		X	
64809-525-1	PRESSURE INDICATOR		X	X
64809-526-1	PRESSURE INDICATOR		X	X
64809-532-1	PRESSURE INDICATOR		X	
64809-532-2	PRESSUE INDICATOR		X	
64809-602-1	PRESSURE INDICATOR		X	X
64818-010-1	OIL PRESSURE INDICATOR	X	X	X
64818-012-1	OILTEMPERATURE INDICATOR	X	X	X
64818-020-1	OILTEMPERATURE INDICATOR	X	X	X
64818-303-1	FUEL PRESSURE INDICATOR	X	X	X
64818-307-1	FUEL PRESSURE INDICATOR	X	X	X
64970-000-2	TACHOMETER INDICATOR		X	X
64970-001-1	TACHOMETER INDICATOR		X	X
6502-3010	DUAL TACHOMETER	X	X	X
6502-3020	DUAL TACHOMETER	X	X	X
6503A-1058	TACHOMETER	X	X	X
684-1009-200	TRANSFORMER-RECTIFIER	X	X	X
684-4143-100	STATIC CONVERTER		X	X
686-4027-600	Landing gear control		X	X
70-0158-5	Dimmer Control		X	X
7000299-909	AUTOPILOT CONTROLLER	X	X	X
7000605-902	Mode Selector		X	X
7030	VERTICAL SPEED INDICATOR	X	X	X
704A-47-612-042	Tachometer	X	X	X
704A33-633-211	STOP, SPHERICAL		X	
704A33-651-210	TR Pitch Change Unit Bearing	X	X	X
704A33640100	FREQUENCY ADAPTER MPN E4165F11		X	
704A34-111-011	Piston Actuator		X	
704A34-240-015	ACCUMULATOR, HYDRAULIC		X	
704A34412241	HOSE, FLEXIBLE		X	
704A36712018	AMMETER	X		X
704A37-642-060	OIL PRESSURE TRANSMITTER	X	X	X
704A41815023	90 Meters Electric Hoist			
704A44-510-027	Fuel Boost Pump	X	X	X
704A44-510-042	BOOST PUMP	X	X	X
704A45360080	Audio Control Panel		X	X
704A46-130-044	Battery, Emergency Lighting		X	X
704A46-814-049	Light Graduator	X	X	X
704A47-270-102	CLUSTER IND		X	X
704A47-621-114	TORQUE INDICATOR	X	X	X
704A47-632-051	Indicator, T4	X	X	X
704A47-632-065	T4 Indicator	X		X
704A47-651-077	Fuel Quantity Transmitter	X	X	X
704A47-651-091	Fuel Qty Transmitter	X	X	X
704A47-651-094	TRANSMITTER, FUEL GAUGE		X	X
704A47-723-006	PANEL FAILURE WARNING	X	X	X
704A47-723-017	Failure Warning Panel		X	X
704A47612042	TACHOMETER	X	X	X
704A47612140	INDICATOR		X	
704A47616045	INDICATOR NR/NTL1+2		X	X
704A47621128	Torque Indicator	X	X	X
704A47621139	INDICATOR		X	
704A47633047	OIL TEMP IND	X	X	X
704A47644039	FUEL PRESS IND	X	X	X
704A47723026	POWER SUPPLY		X	X
704A47750001	Icing Rate Meter Panel		X	X
7050A36-322-96	CARTRIDGE, FILTERING			
7051A4314007	ANCILLARY CARD		X	
70BM015420	ARRIEL 1D1 MODULE 1		X	

70BM025020	ARRIEL 1D1 MODULE 2		X	
70BM055020	ARRIEL 1B MODULE 05		X	
70BM055420	ARRIEL 1D1, M05		X	
7407-28	BAT-28AH SLA		X	
742593-1-1	NR Indicator	X	X	X
748-934-2	INDICATOR FUEL	X	X	X
758-355-2	FUEL GAUGE TRANSMITTER	X	X	X
758355-2	Fuel Qty transmitter	X	X	X
762370	FUEL QTY TRANSMITTER		X	X
76403-25125-043	QUADRANT ASSY.		X	
76450-01005-102	Landing Gear Control		X	X
76450-01019-101	TONE GENERATOR			
76450-01076-103	TRIPLE TACHOMETER	X	X	X
764590	UPPER FUEL PROBE		X	X
764591	GAGE,LOWER FUEL TANK		X	X
76550-00915-108	Panel Caution Master		X	X
76550-01001-103	Caution Panel	X	X	X
76550-23800-101	STATIC INVERTER		X	X
76550-23800-102	STATIC INVERTER		X	X
768128	FUEL QTY TRANSMITTER		X	X
768129	FUEL QTY TRANSMITTER		X	X
76900-01804-103	AFCS Indicator Panel	X	X	X
76900-01804-104	AFCS Indicator Panel	X	X	X
76900-01821-102	Transducer		X	
76900-01821-103	Transducer		X	
76900-01821-104	Transducer		X	
7813-175-00-13	TRIPLE TACHOMETER	X	X	X
7813-177-00-12	NR-2NTL TRIPLE INDICATOR	X	X	X
7813-178-20-12	NR-2NTL TRIPLE INDICATOR	X	X	X
782980-2	FUEL QTY TRANSMITTER		X	X
788664-1	INDICATOR NR/NF	X	X	X
788664-2	INDICATOR NR/NF	X	X	X
788664-3	Indicator	X	X	X
788998-1-1	NR/NF INDICATOR		X	X
792977-2	FUEL QTY TRANSMITTER		X	X
792977-3	FUEL QTY TRANSMITTER		X	X
792978-2	FUEL QTY TRANSMITTER		X	X
792978-3	FUEL QTY TRANSMITTER		X	X
792979-2	FUEL QTY TRANSMITTER		X	X
792979-3	FUEL QTY TRANSMITTER		X	X
792980-1	FUEL QTY TRANSMITTER		X	X
792981-1	FUEL QTY TRANSMITTER		X	X
794218	FUEL QTY TRANSMITTER		X	X
794218-1	FUEL QTY TRANSMITTER		X	X
794281-2	FUEL QTY TRANSMITTER		X	X
794325	FUEL QTY TRANSMITTER		X	X
794325-1	FUEL QTY TRANSMITTER		X	X
794356	FUEL QTY TRANSMITTER		X	X
794356-1	FUEL QTY TRANSMITTER		X	X
794613-1	FUEL QTY TRANSMITTER		X	X
794614	FUEL QTY TRANSMITTER		X	X
794614-1	FUEL QTY TRANSMITTER		X	X
794615	FUEL QTY TRANSMITTER		X	X
80-0203-9	Caution Panel	X	X	X
8000	Airspeed Indicator		X	X
8096-505-1	PRESSURE INDICATOR		X	X
8107-101-00-12	TRANSMITTER,ENGINE OIL PRESSURE	X	X	X
8107-122-00-10	OIL PRESSURE TRANSMITTER		X	
8107-133-00-10	OIL PRESSURE TRANSDUCER		X	
8226801902	ACCUMULATOR, HYDRAULIC		X	
85240-010	P.C.B. VOLTAGE RAGULATOR		X	X
865474-301	HSR-203 Synchro/Resolver Angel Indicator		X	



8800-T	ALTI-CODER		X	
8DJ131LAN1	TACHOMETER INDICATOR	X	X	X
8DJ131LAV1	TACHOMETER INDICATOR	X	X	X
8DJ13AAS-27	Tachometer	X	X	X
8DJ13ABN-25	Indicator Tachometer Electric DHC-2	X	X	X
8DJ13ABN24	Tachometer	X	X	X
8DJ150FAD1	DUAL TACHOMETER	X	X	X
8DJ81LVA4	N1 TAC GAGE	X	X	X
900-2360-1	Oil Pressure Indicator	X	X	X
900-2365-1	OIL TEMPERATURE INDICATOR		X	X
900-2380-1	T4 Indicator	X	X	X
9009-3003	TEMP/PRESS IND	X	X	X
9016-3002	Dual Loadmeter/Fuel Pressure Indicator	X	X	X
921012-1	TFM-138/138B VHF FM Transceiver		X	X
930-500-25-1	SEARCHLIGHT	X	X	X
9525270	TRANSIST, ZXM61N02F SOT23			
9550161210	BLEED VALVE		X	
9550176240	Torque Transmitter	X	X	X
9696	MOTOR,ELECTRICAL	X	X	X
971083-1	TFM-500 VHF/UHF FM Transceiver		X	X
991095-1	TFM-550 UHF/VHF/VLO FM Transceiver		X	X
A-30	ACK Encoder		X	
A3-06-2880	ELT 345		X	
A5930-02	Turn and Bank IND.	X	X	X
AA12-010	Audio Panel		X	X
AMS42	Audio Controller, Multi-User		X	X
AMS43	Audio Controller		X	X
AMS43H	Audio Control Panel		X	X
AMS44	Audio Control Panel		X	X
AMS44N	AUDIO PANEL		X	X
ASH584-5	Static Inverter	X	X	X
AW1842BA06	TORQUE INDICATOR	X	X	X
B1250000	STANDBY BATTERY		X	X
BA1816B	Auxiliary Unit	X	X	X
BH185R-154D	T5 Temperature Indicator	X	X	X
BJ1977A	JUNCTION BOX	X	X	X
BTS89A	BATTERY, STANDBY		X	X
C16159AB	NR/NTL 1+2 INDICATOR	X	X	X
C16159BA	NR/NTL 1+2 INDICATOR	X	X	X
C16159CA	NR/NTL 1+2 INDICATOR	X	X	X
C16159DA	NR/NTL 1+2 INDICATOR	X	X	X
C537C2211102	FAIRING ASSY,LH LOWER		X	
C622A1007104	UPPER ADAPTOR FITTING		X	
C632A2051201	ROTOR,FAN		X	
C6610600-0103	AIRSPPEED INDICATOR	X	X	X
C713C1101105	Firewall		X	
C714A1101105	ANGLE SUPPORT, RH		X	
C714A1110102	FITTING, ENGINE		X	
CESSNA 152	CESSNA 152		X	X
CESSNA 172M	CESSNA 172M	X	X	X
CESSNA 172P	CESSNA 172P		X	X
CP1766B	AUDIO CONTROL PANEL		X	X
CP1766G	AUDIO CONTROL PANEL		X	X
CP1976A1	AUDIO CONTROL PANEL		X	X
CP2618A	AUDIO CONTROL PANEL		X	X
CP2618AA02	AUDIO CONTROL PANEL		X	X
CP2618AA03	AUDIO CONTROL PANEL		X	X
CP2618AA05	AUDIO CONTROL PANEL		X	X
CP2618BA03	AUDIO CONTROL PANEL		X	X
CP2618CA03	AUDIO CONTROL PANEL		X	X
CP2618DA01	AUDIO CONTROL PANEL		X	X
CP2618DB01	AUDIO CONTROL PANEL		X	X

CP2618DB03	AUDIO CONTROL PANEL		X	X
D350-591-215	Heli Access Step LH		X	
DL404-109	Triple Tach.	X	X	X
DL412-65	Tachometer	X	X	X
E-04	ELT		X	
E0043-7C0	BANDING CLAMP			
EA470-3518	Fuel Sending Unit	X	X	X
EA470-3587	FUEL PROBE		X	X
EA470B-3588	LOWER FUEL PROBE	X	X	X
EA5171-7	Indicator, Airspeed	X	X	X
EBC-502	ELT		X	
EE0005-0111	Emergency Battery		X	X
EE0050-2	5 VDC POWER SUPPLY		X	X
ELT 10	ELT Transmitter		X	X
ELT 6.1	ELT		X	
G-5400-6	LANDING LIGHT RETRACTABLE	X	X	X
G12324-26	LH CYCLIC STICK		X	
G300103	Rotor RPM Warning Box		X	X
G5400-6	Landing Light assy	X	X	X
G6250-4	CONTROLLABLE SEARCH LIGHT	X	X	X
GA103	Light Generator unit		X	X
GC10257-4	Z1 Board		X	X
GC10257-6A	ELECTRONIC BOARD		X	X
GC10257-6B	ELECTRONIC BOARD		X	X
GC10257-7	ELECTRONIC BOARD		X	X
GC10257-8	ELECTRONIC BOARD		X	X
GC10257-9	ELECTRONIC BOARD		X	X
GC10257Y01	Z1 Card		X	X
GC10257Y1	ELECTRONIC BOARD		X	X
H140BHM2	GYRO HORIZON	X	X	X
H321EHM	Gyro		X	
HE901	H.E. Generator		X	
HG02-0131-5	Tachometer, Prop	X	X	X
HYDRAULIC FLUID ANALYSIS	HYDRAULIC FLUID ANALYSIS			
IDA0302470	TORQUE INDICATOR		X	
IDM2202483	Delta NG Indicator		X	
KCA0113W	Standby Compass		X	X
LA-71-1	Altimeter	X	X	X
LA-72-11	Altimeter	X	X	X
LE-51-11B	Altimeter	X	X	X
M5930-02	INDICATOR, TURN AND SLIP	X	X	X
M83723/60-28AC	Dust Cap - With Chain			
MS5750V01	Fan motor	X	X	X
Main Rotor Blade Rental	Main Rotor Blade Rental			
NAS602-6P	SCREW: PAN HD,MACHINE,ST,			
NPX138N-070	VHF FM TRANSCEIVER		X	X
P94B12-203	Fuel Pump	X	X	X
P94B12-208	Fuel Pump	X	X	X
P94B12-209	Fuel Pump	X	X	X
P94C16-601	FUEL ELECTRIC PUMP	X	X	X
P94C16-602	PUMP,FUEL BOOSTER	X	X	X
P94C16-606	Fuel Pump	X	X	X
PA110-015	Audio Power Amplifier		X	X
PC-15BC (A)	Static Inverter		X	X
PC-251	Static Inverter		X	X
PC-251-123K	STATIC INVERTER		X	X
PC-251-123KA	STATIC INVERTER		X	X
Previous Outstanding Balance	Previous Outstanding Balance			
RC-30-VIL	Aerosonic VSI	X	X	X
RCA11A-8	INDICATOR DIRECTIONAL GYRO	X	X	X
RCA11A-9	Directional Gyro	X	X	X
RG-224	LEAD ACID BATTERY		X	

RG-332-2	Main Battery		X	
RG-355	Battery		X	
RG-390E	Concorde Battery		X	
RG24-11	Concorde Lead Acid 24V Battery		X	
RG350	BATTERY LEAD ACID		X	
S1820502-02	KANNAD 406 AP		X	X
S1822502-02	Kannad 406 AF-H		X	
S1840501-01	ELT KANNAD AF-COMPACT TRANSMITTER		X	X
S1840501-01M	Kannad ELT 406AF-C		X	
S1840501-04	KANNAD 406 AF-COMPACT(ER)	X	X	X
S1851501-02	ELT, INTEGRA AF		X	X
S1852501-01	ELT	X	X	X
S1852501-02	ELT, AF_H INTEGRA		X	X
S1854501-01	ELT		X	X
SC5072	Servo		X	
SEL-019DR	TOT Indicator	X	X	X
SEL-0C19EH	T4 INDICATOR	X	X	X
SEL-0C19EH	T4 INDICATOR	X	X	X
SETL-0C329A	TRIPLE TACHOMETER	X	X	X
SIM-31200	Synchro/Resolver Simulator		X	
SSD120-30A-RS232	Altitude Digitizer		X	
SSD120-30N-RS232	Altitude Encoder, 30,000ft max with RS-232 out		X	
SSD120-XXA	Altitude Digitizer		X	
VFS10-90-2	VHF COMM ANTENNA			
VIT1039	NR SPEED SENSOR POST 074223		X	
vfs10-90-2	VHF Antenna			